

ELECTRICAL COMPONENT LOCATOR

1992 Subaru SVX

1992 SUBARU
Electrical Component Location



SUBARU; SVX

SAFETY PRECAUTION

WARNING: When working on vehicles equipped with Supplemental Restraint System (SRS), never apply electrical voltage to the system. This could cause the SRS (air bag) to be deployed. For complete Air Bag Safety precautions see the AIR BAG RESTRAINT SYSTEM article in ACCESSORIES/SAFETY EQUIPMENT Section.

BUZZERS, RELAYS & TIMERS

Component	Component Location
ABS Relays (2)	On top of ABS actuator assembly.

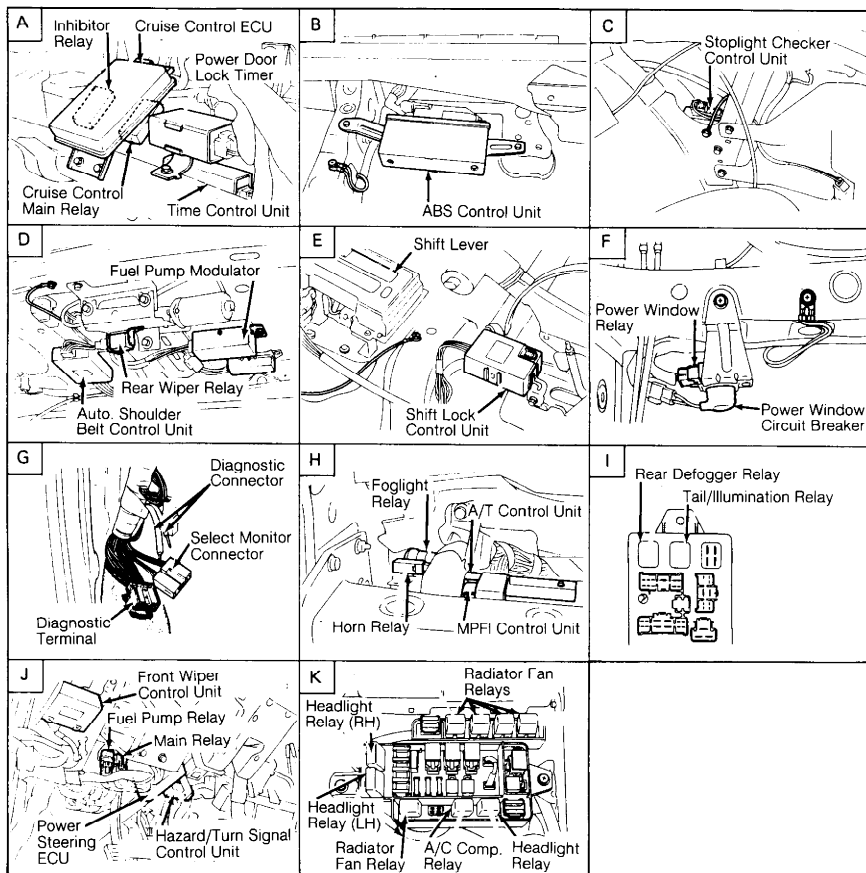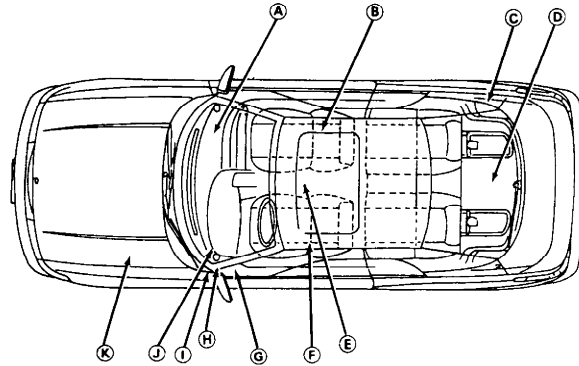

93C27435

A/C Compressor Relay



On engine compartment fuse/relay block.

A/C Relay

On engine compartment fuse/relay block.

Blower Fan Relays (High/Low)

Mounted behind blower motor assembly.

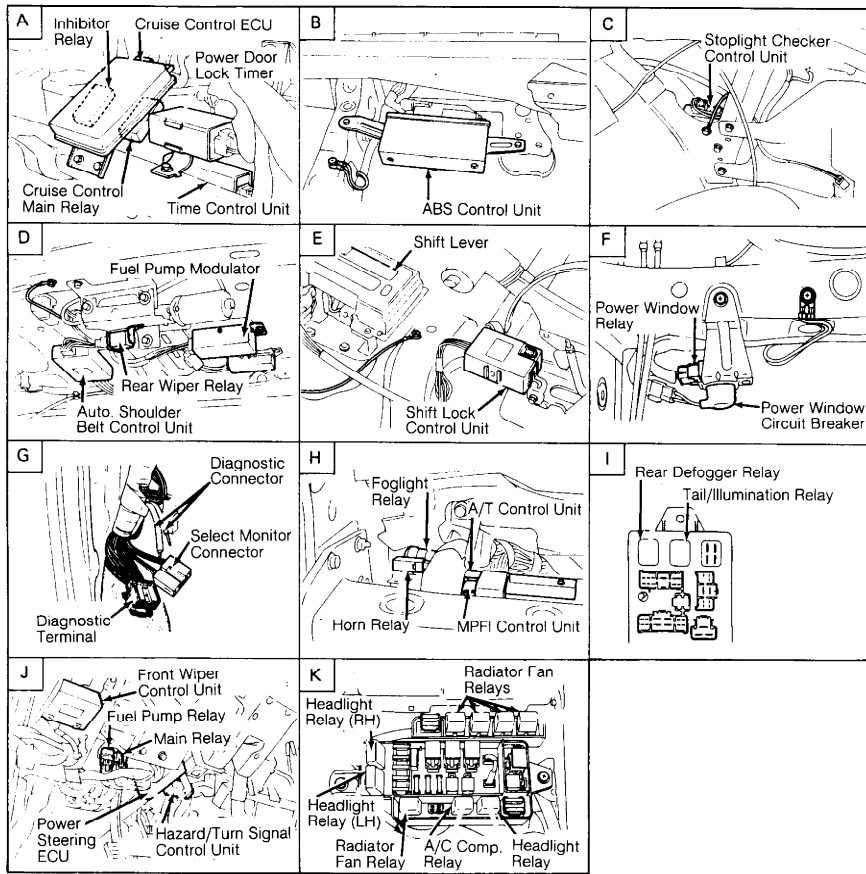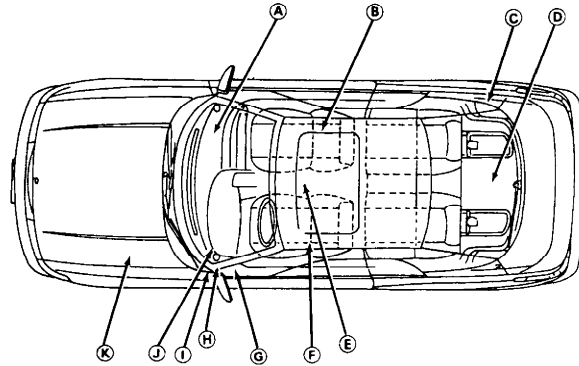



93C27435

Cruise Control Main Relay

Behind right side of dash,
below cruise control ECU.

Dome Light Timer



Behind right side of dash.

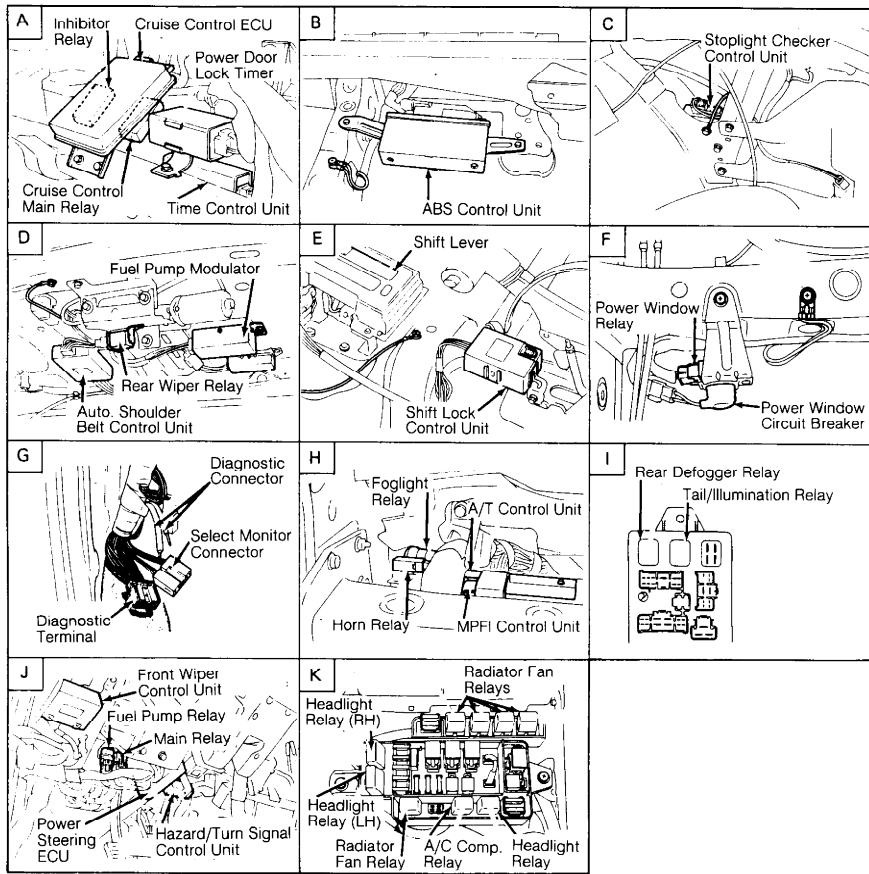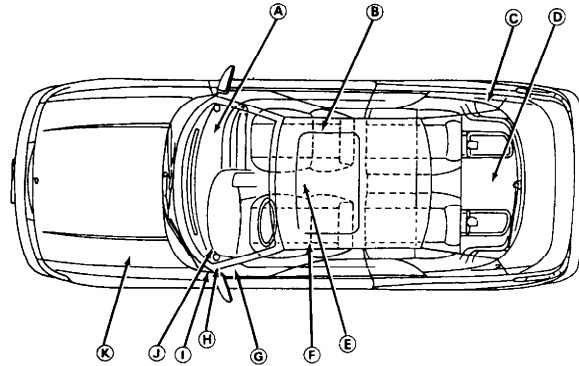

93C27435

Foglight Relay



Behind left side of dash.

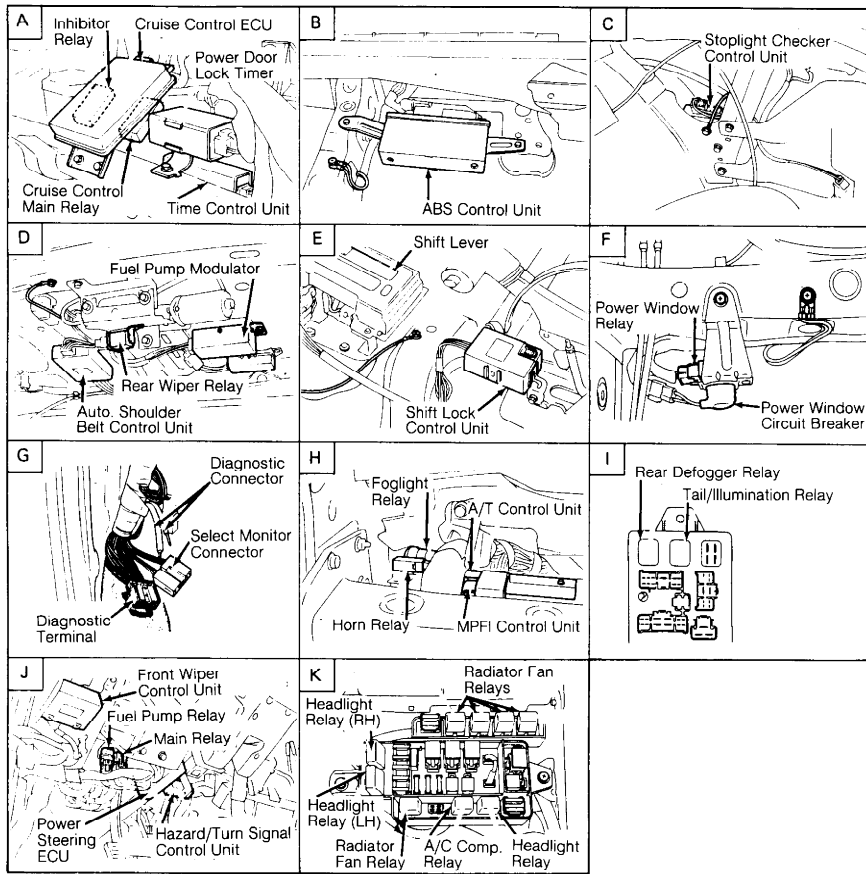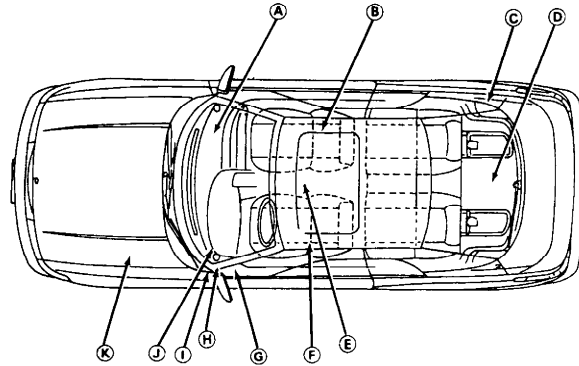

93C27435

Fuel Pump Relay



On right of steering column,
on wiring harness.

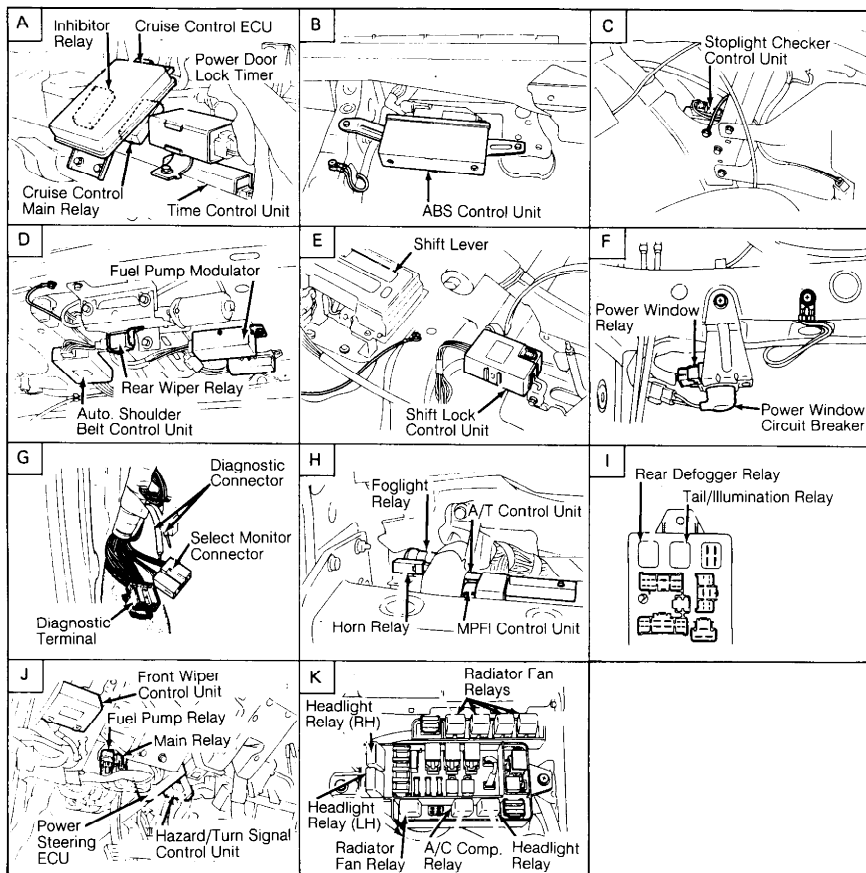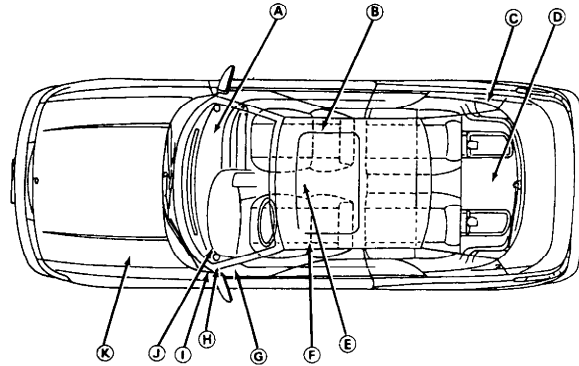

93C27435

Headlight Relays (3)



On engine compartment fuse/relay block.

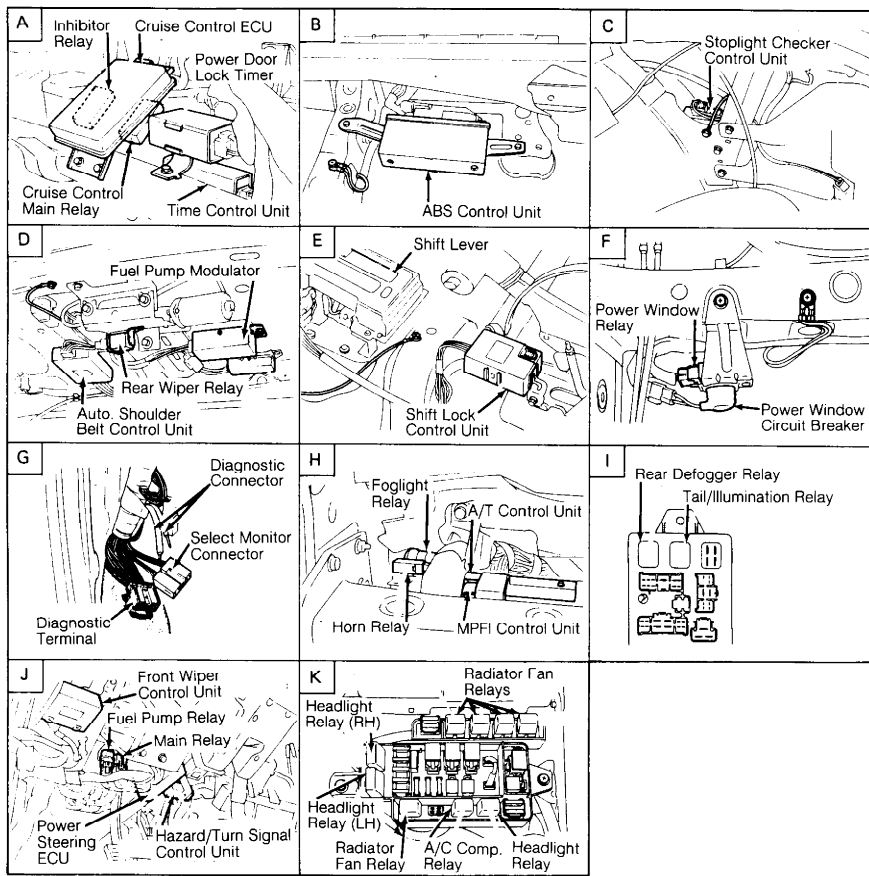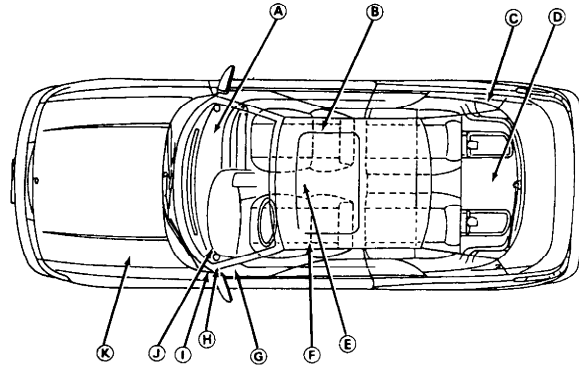

93C27435

Horn Relay



Behind left side of dash.

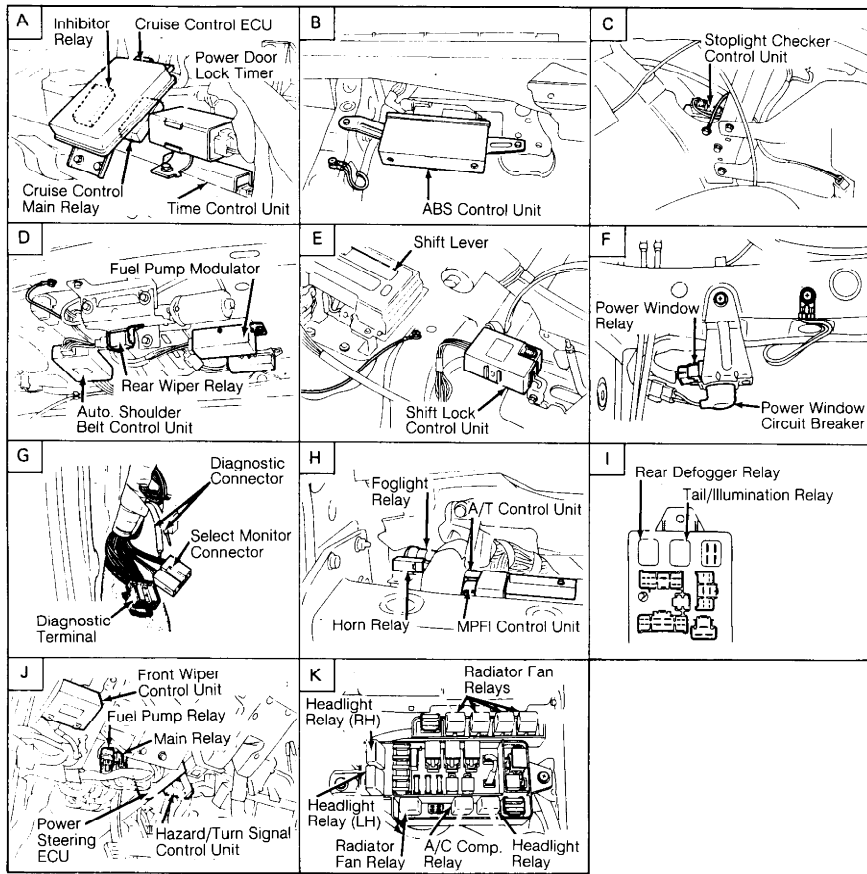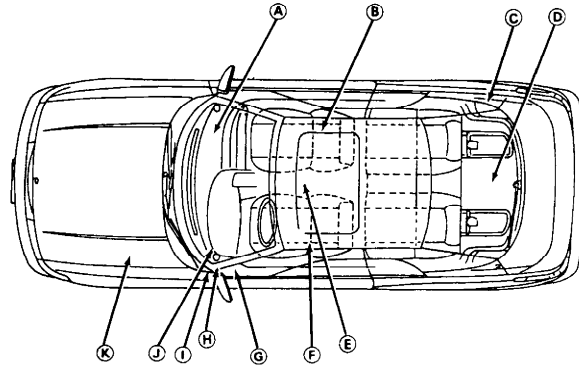

93C27435

Inhibitor Relay

Behind right side of dash,
below cruise control ECU.

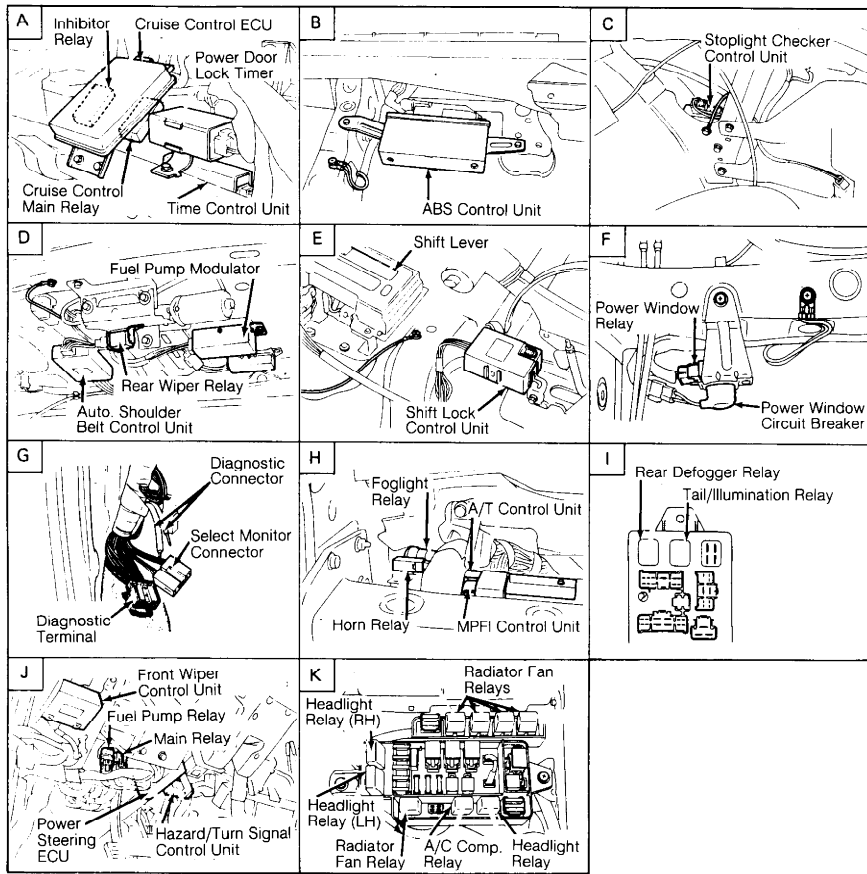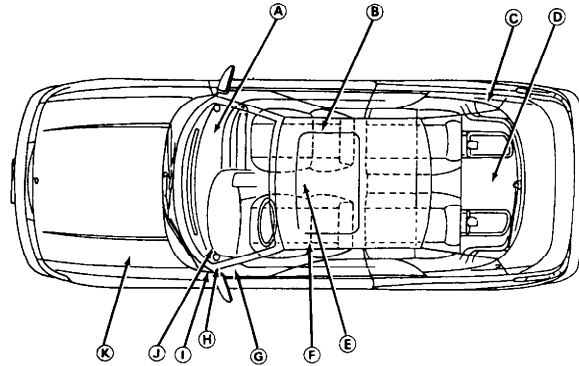



93C27435

Main Relay

On right of steering column,
on wiring harness.

Parking Light Relay



Behind left side of dash.

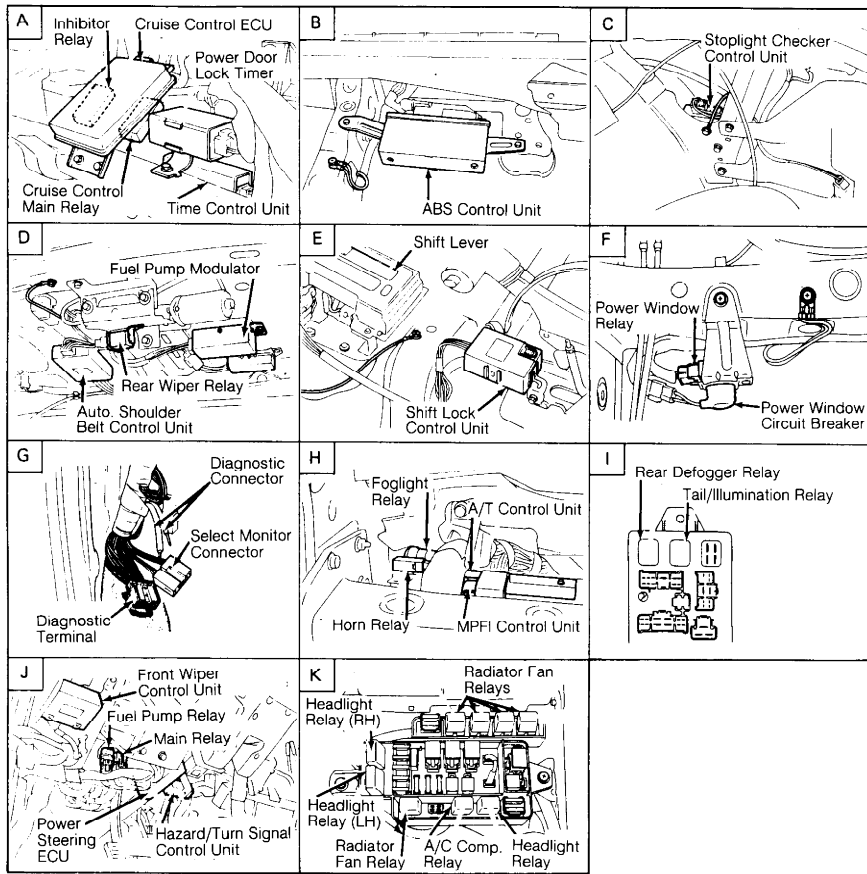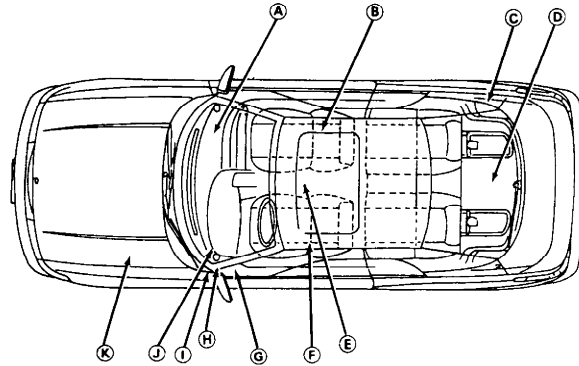

93C27435

Power Door Lock Timer



Behind right side of dash,
near cruise control ECU.

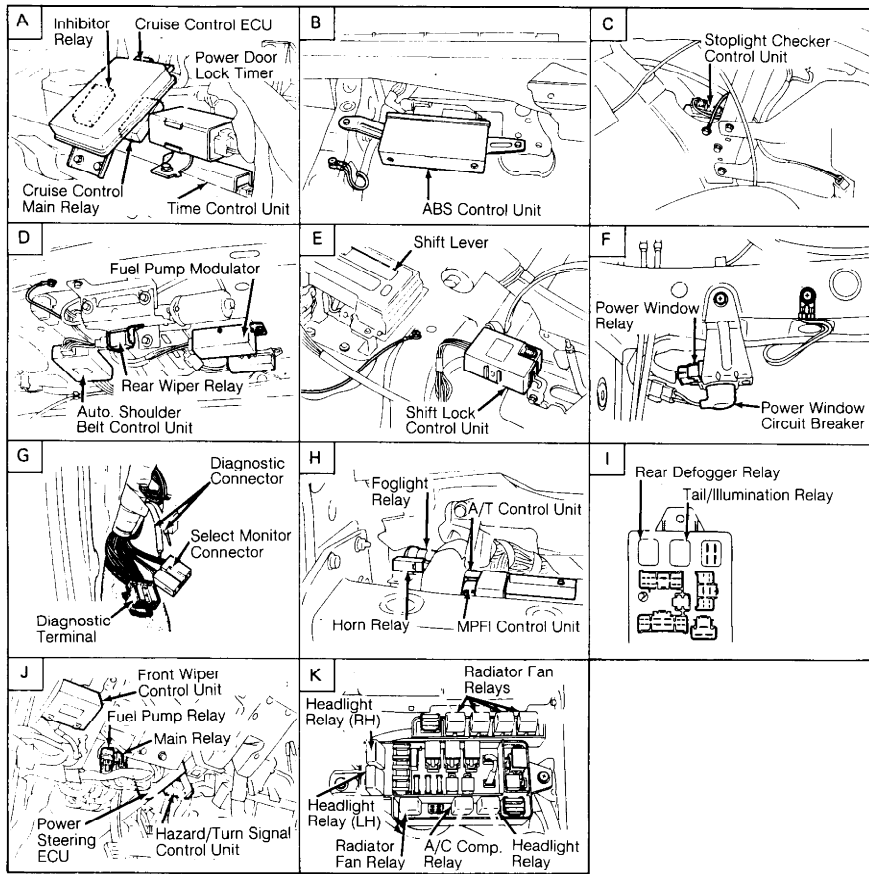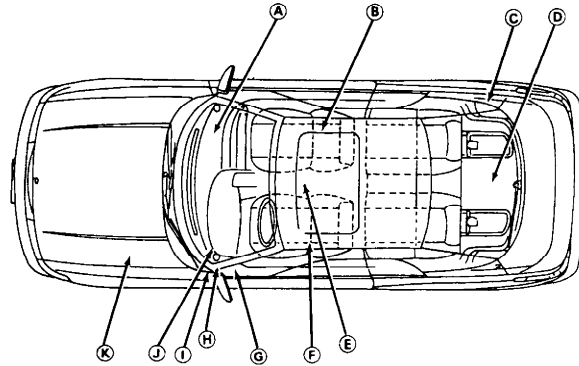

93C27435

Power Window Relay



On bracket, under driver's seat.

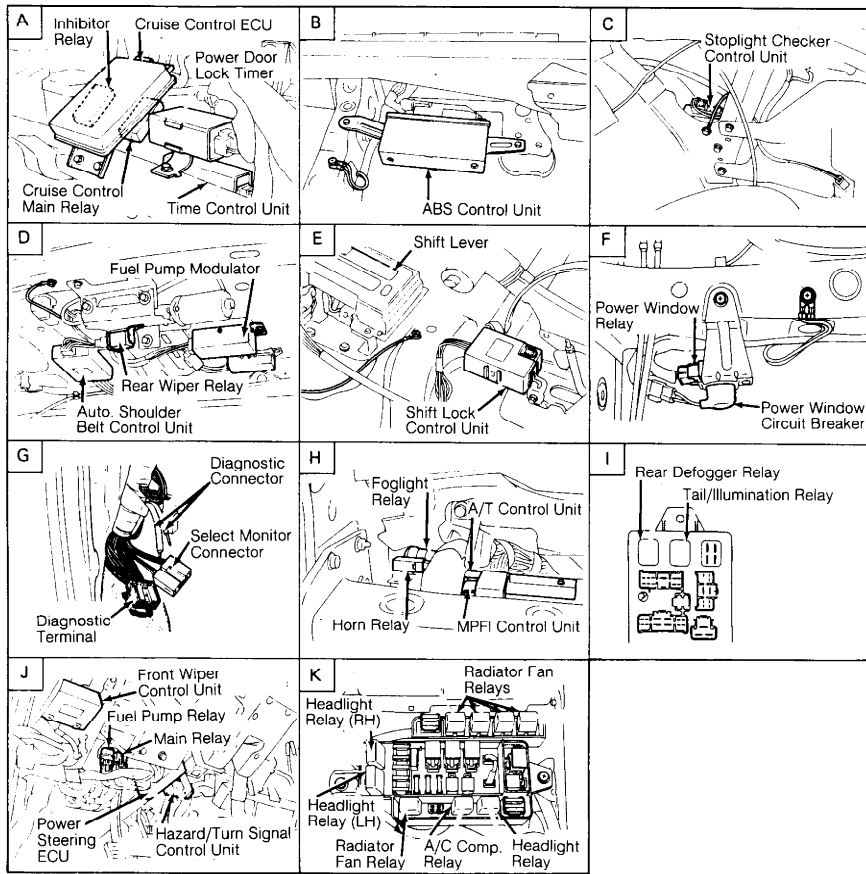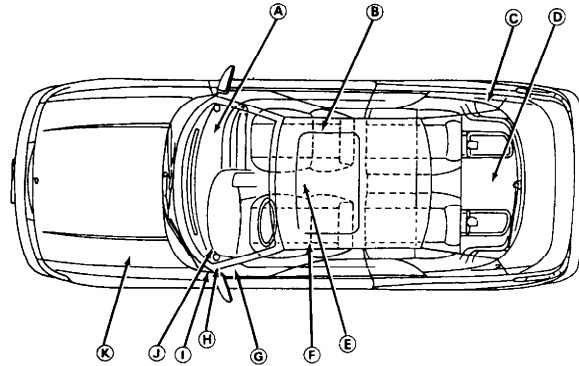

93C27435

Radiator Fan Relays (5)



On engine compartment fuse/relay block.

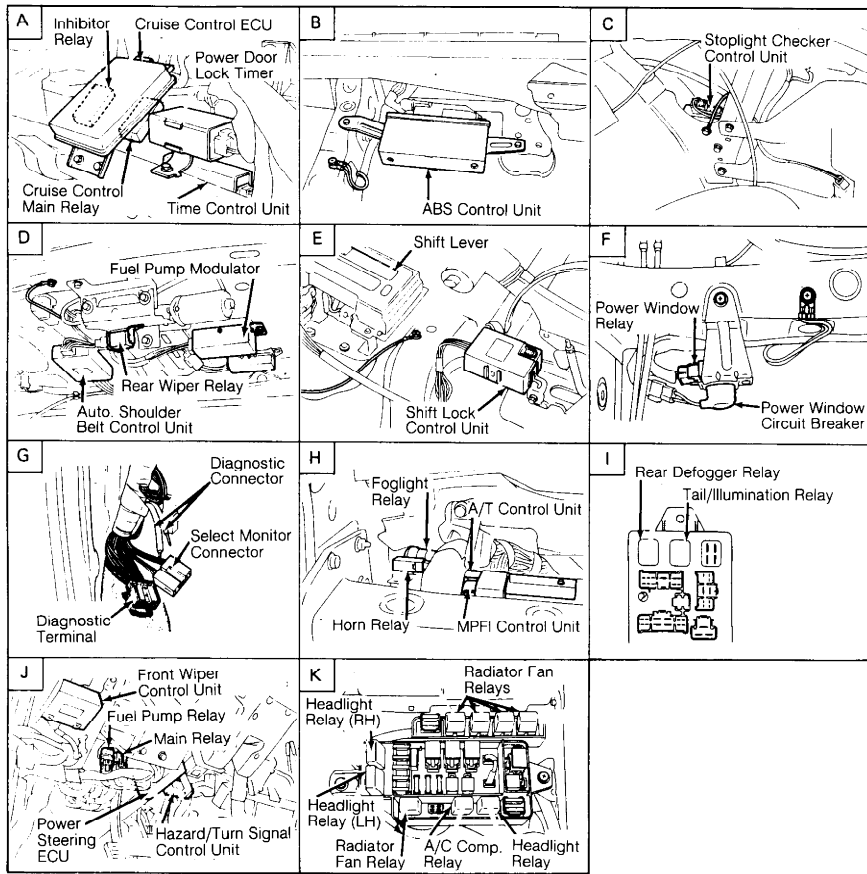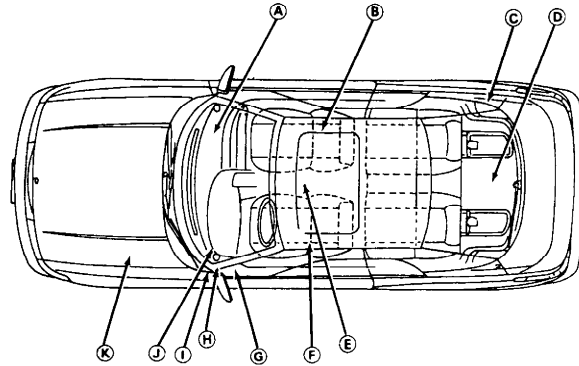

93C27435

Rear Window Defogger Relay

On passenger compartment fuse/relay block.

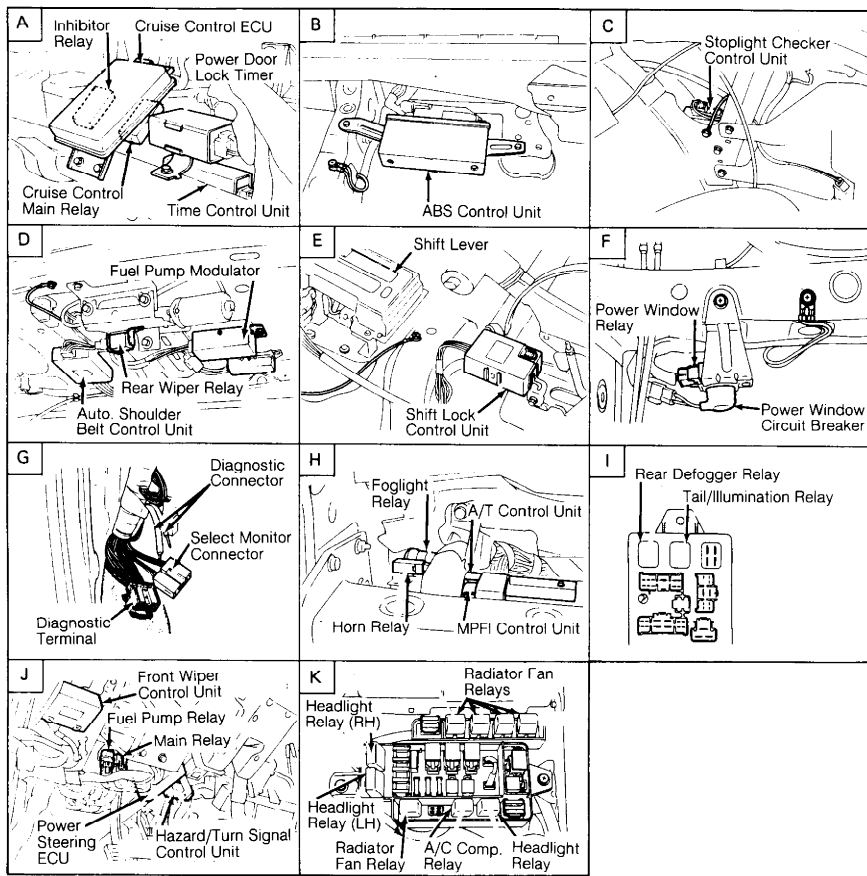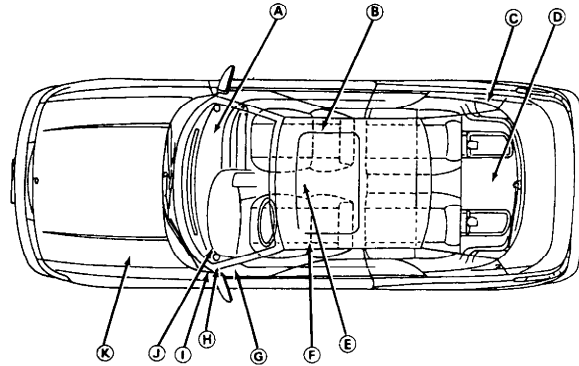



93C27435

Rear Wiper Relay

In luggage compartment, under package tray.

Starter Interrupt Relay

Behind left side of dash.

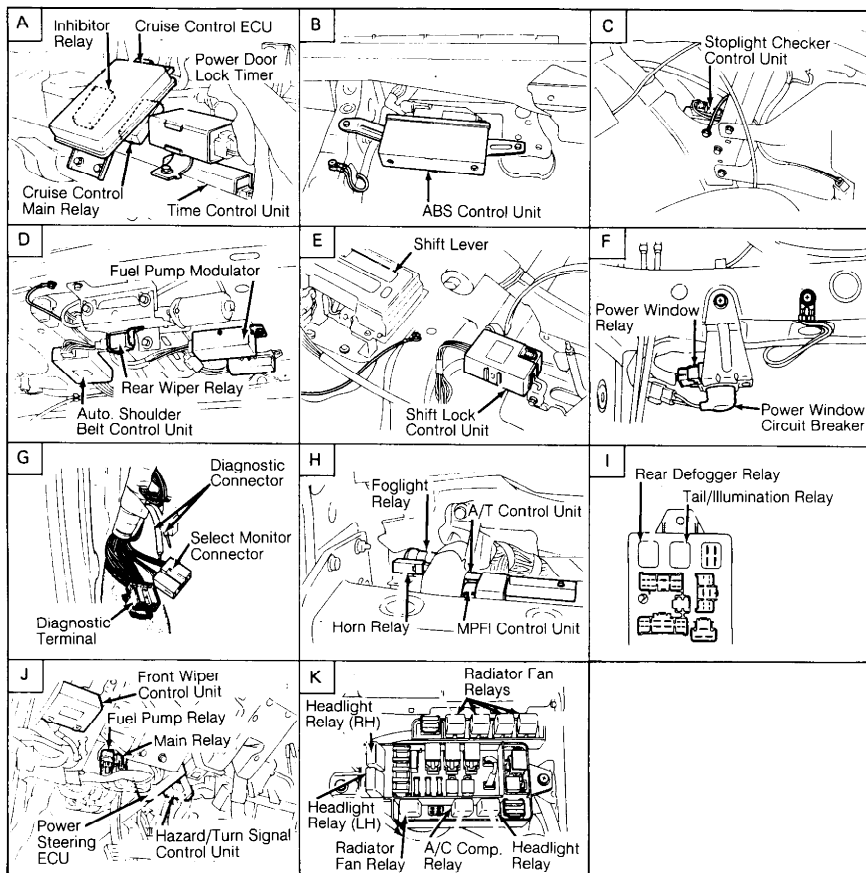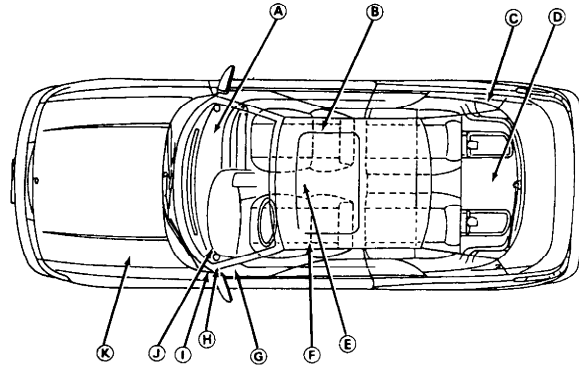

93C27435

Taillight/Illumination Relay

On passenger compartment fuse/relay block.

CIRCUIT PROTECTION DEVICES

Component

Component Location



Fuse/Relay Block
 Engine Compartment

On left side of engine

compartment, behind battery.

Passenger Compartment

Behind left side of dash,
above hood release handle.

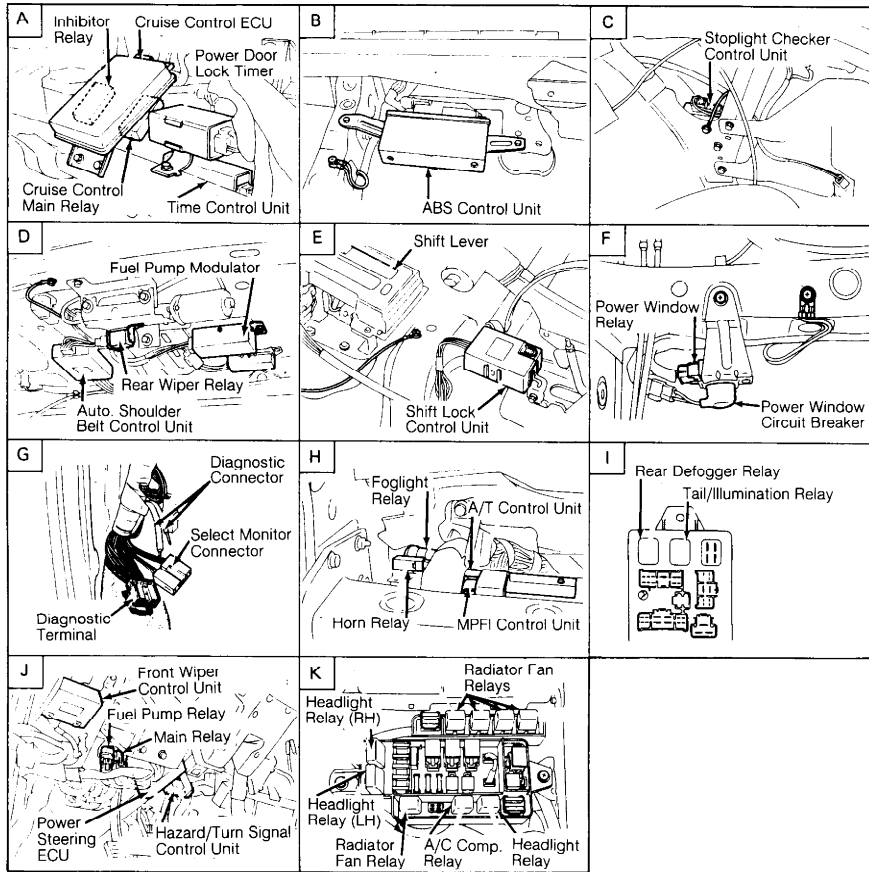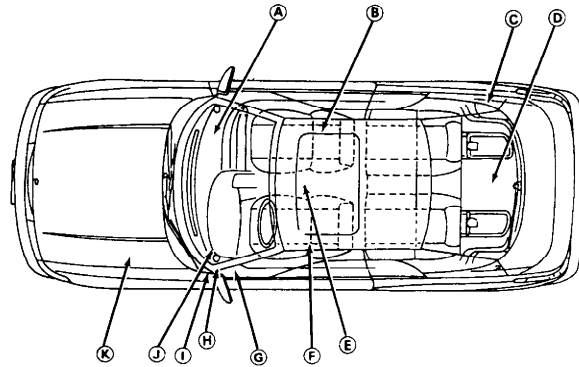

93C27435



Power Window Circuit Breaker

On bracket, under driver's seat.

CONTROL UNITS

Component

Component Location

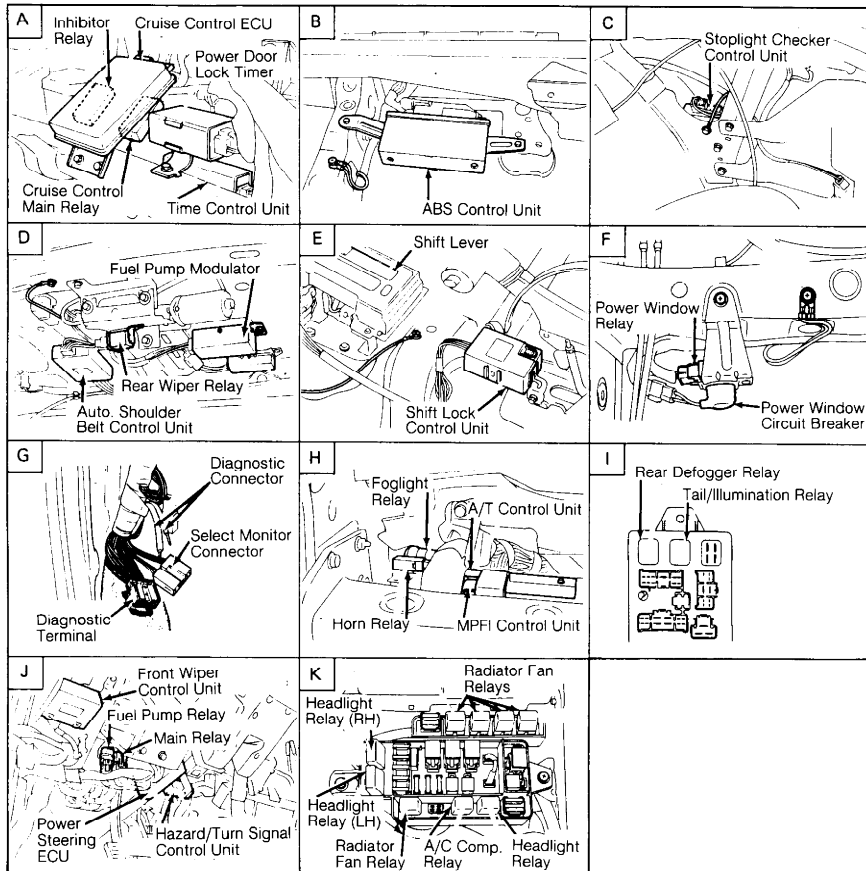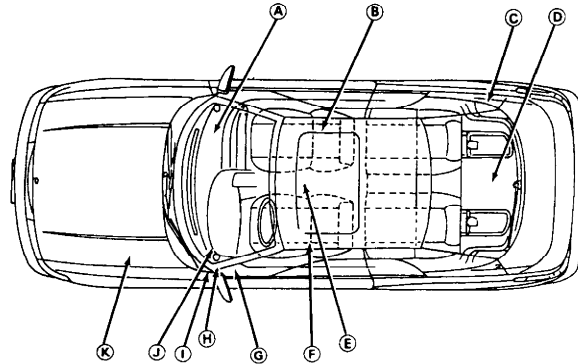

93C27435

ABS Control Unit



Under right front seat.

Air Bag Control Unit

Behind center console.

Anti-Theft Control Unit

Behind right side of dash,
above glove compartment.

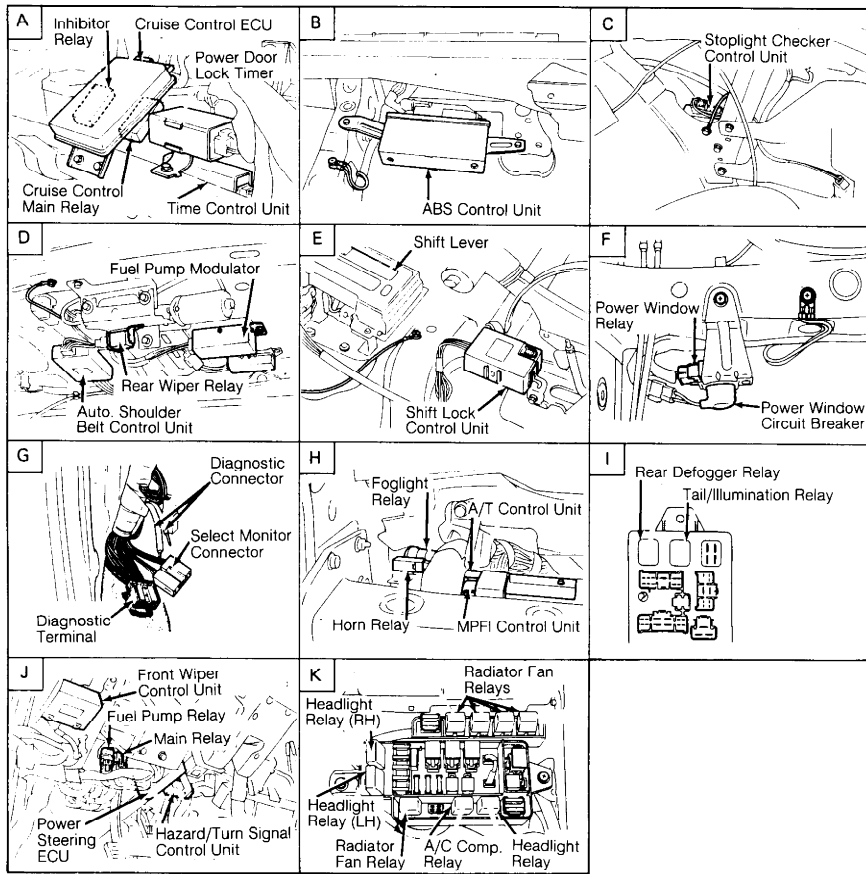
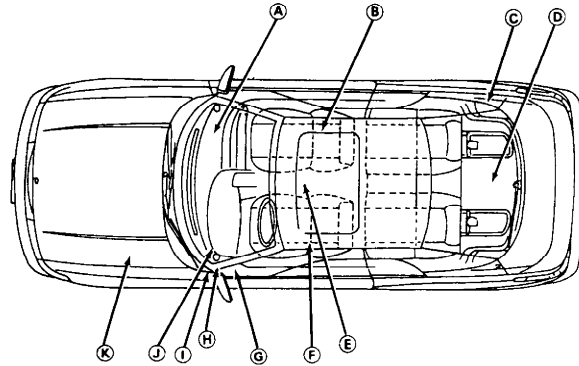


93C27435

A/T Control Unit

Behind left side of dash, near steering column.



Auto. Shoulder Belt

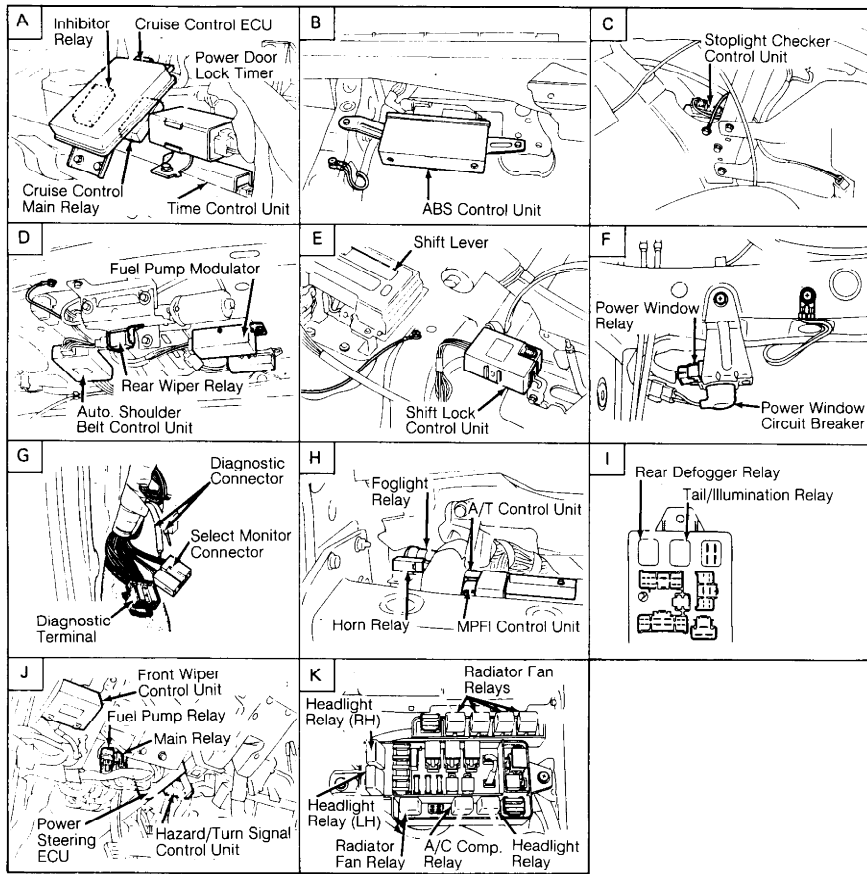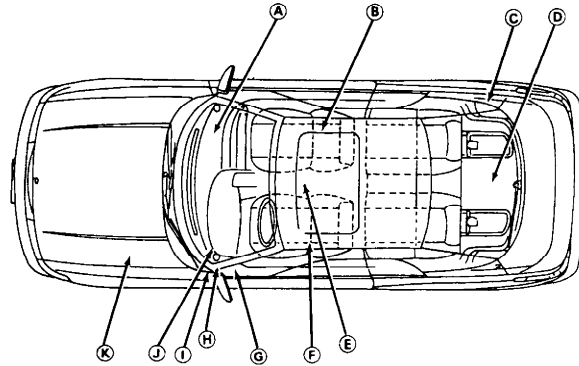

93C27435

Control Unit

In luggage compartment, under package tray.

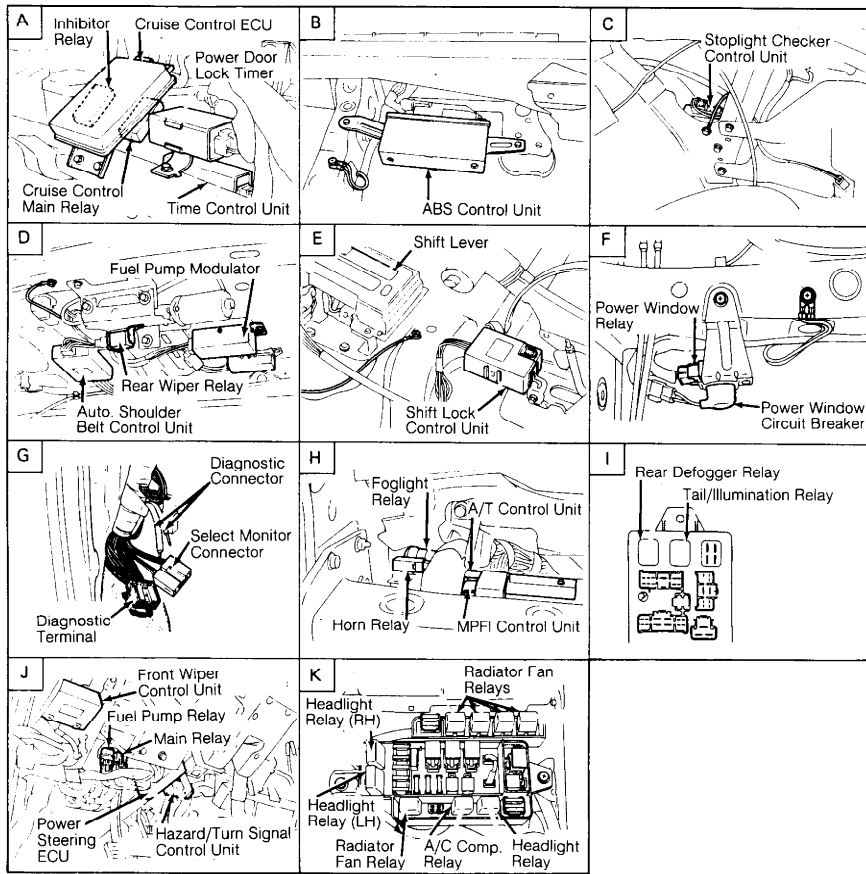
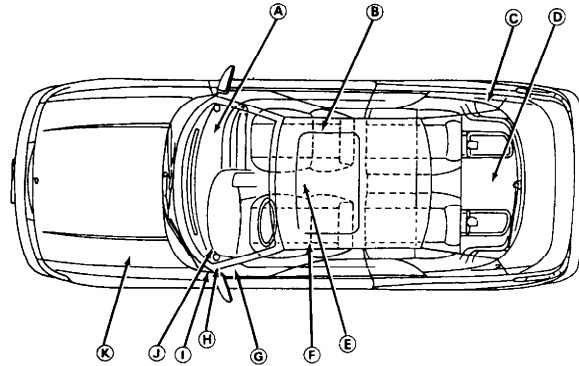


93C27435

Cruise Control ECU

Behind right side of dash.



Hazard/Turn Signal

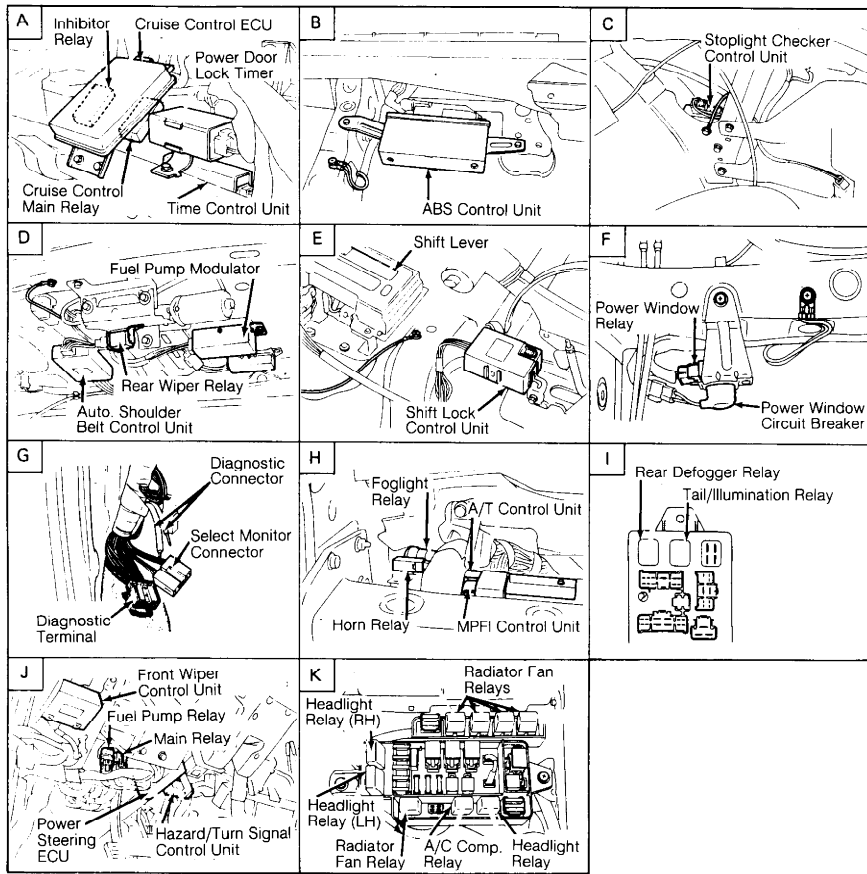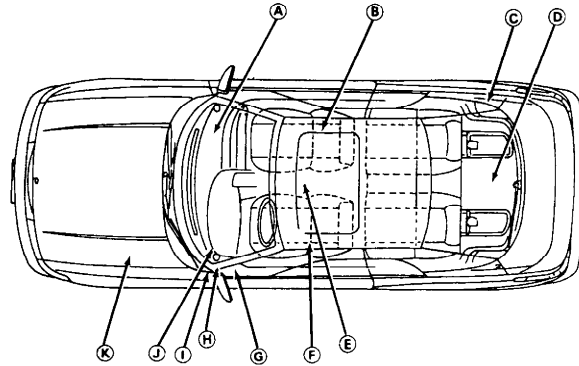

93C27435

Control Unit



Behind left side of dash,
right of steering column.

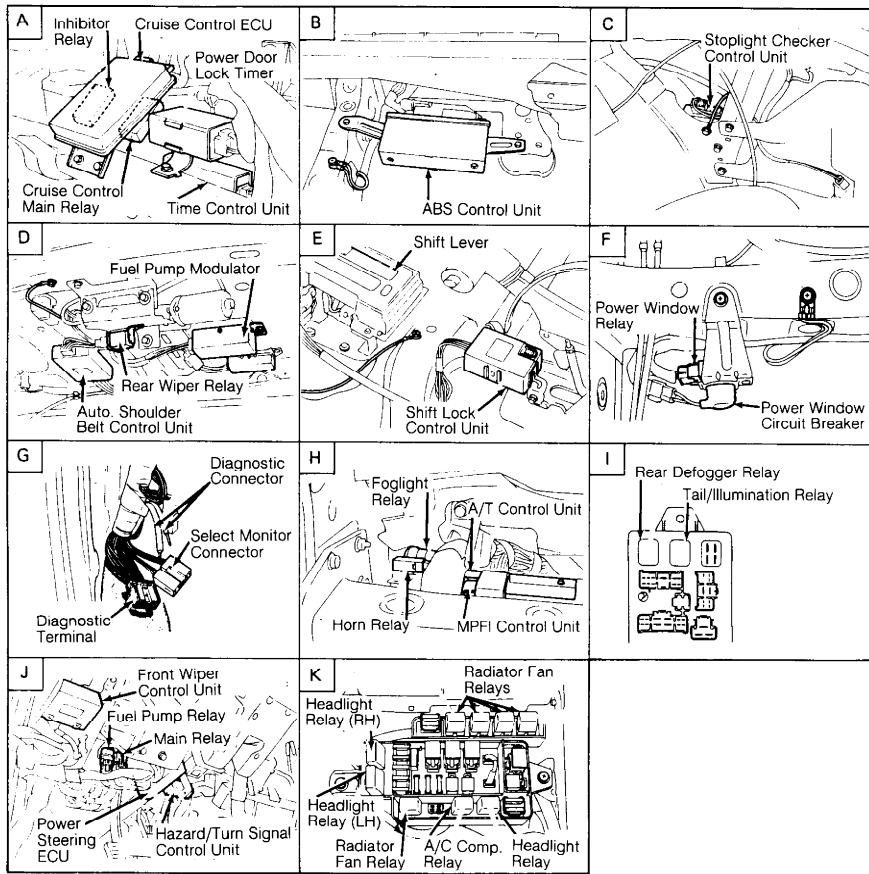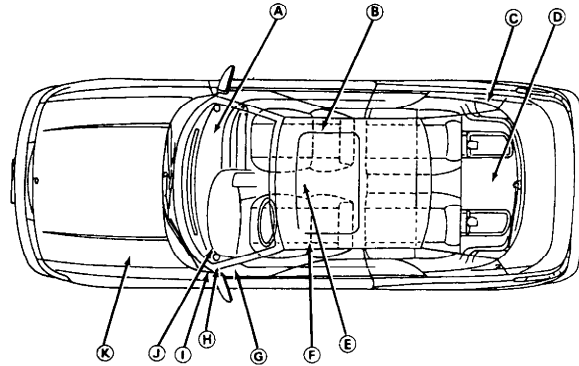

93C27435

MPFI Control Unit



Behind left side of dash.

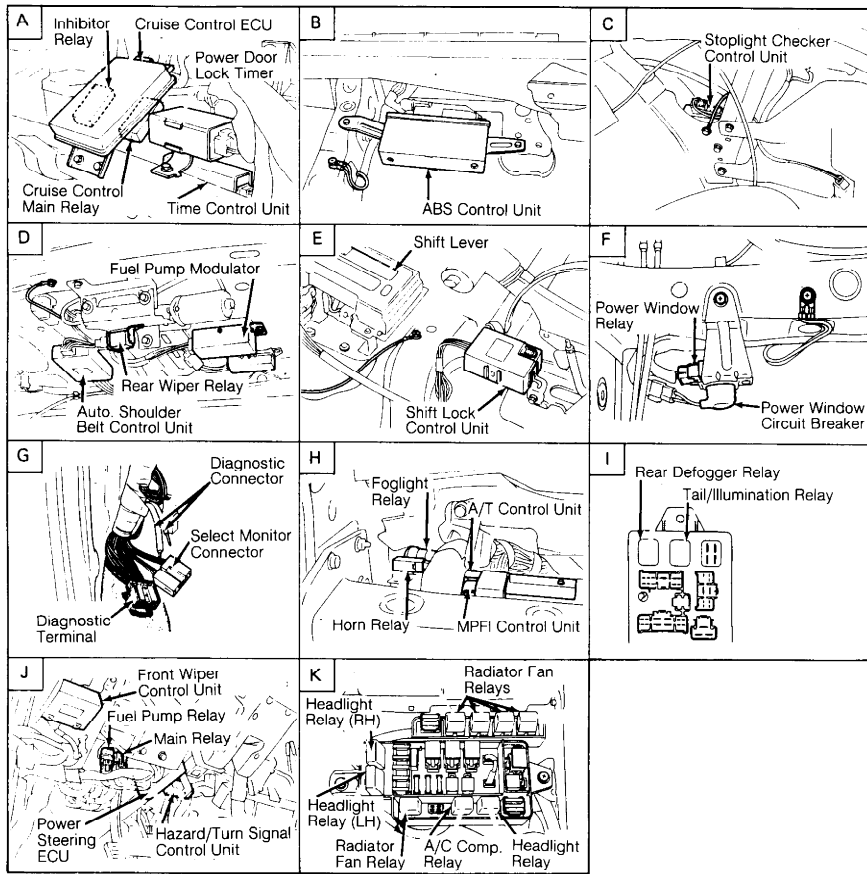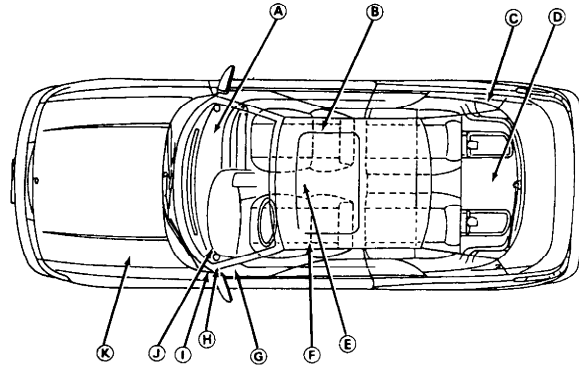

93C27435

Power Steering ECU

Mounted on upper left of steering column.

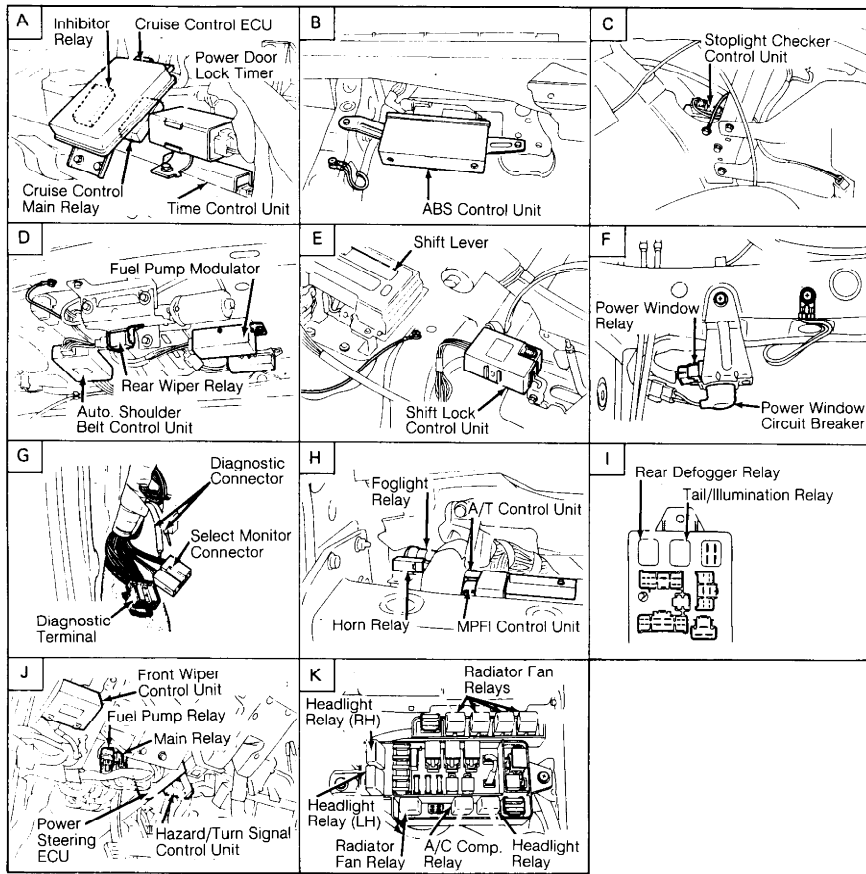
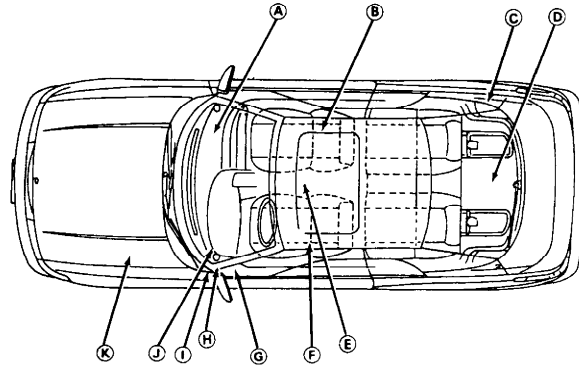


93C27435

Shift Lock Control Unit

Under center console, behind shift lever.



Stoplight Checker

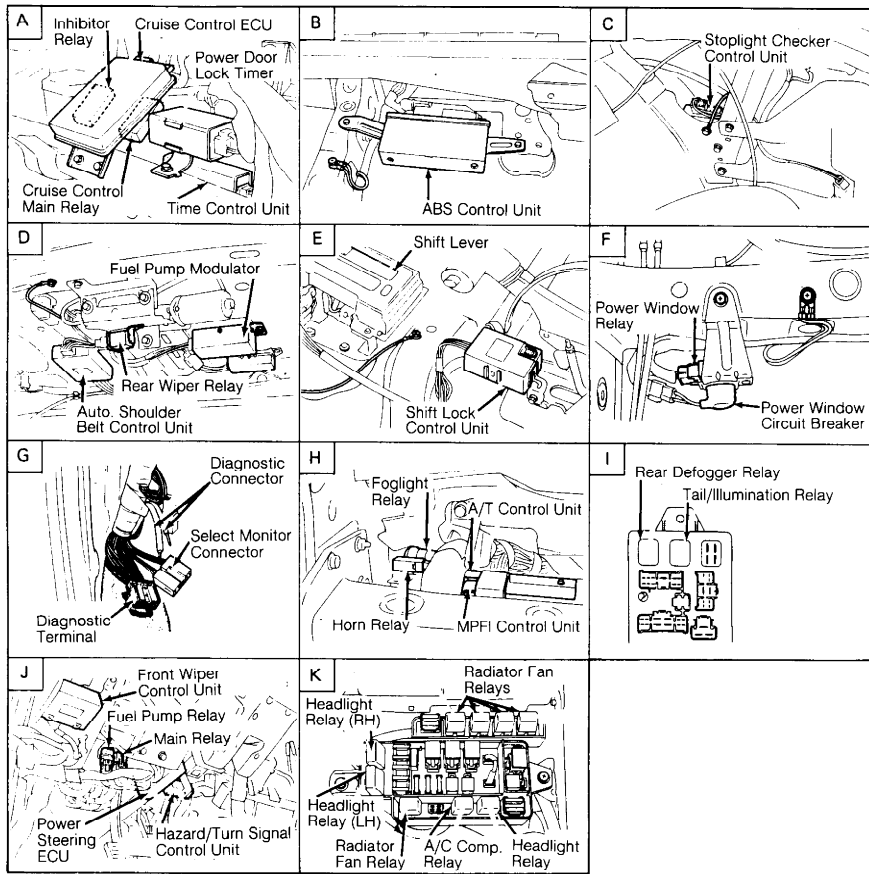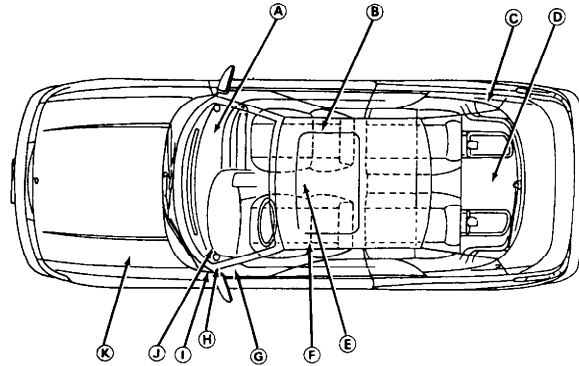

93C27435

Control Unit

In right side of luggage compartment.

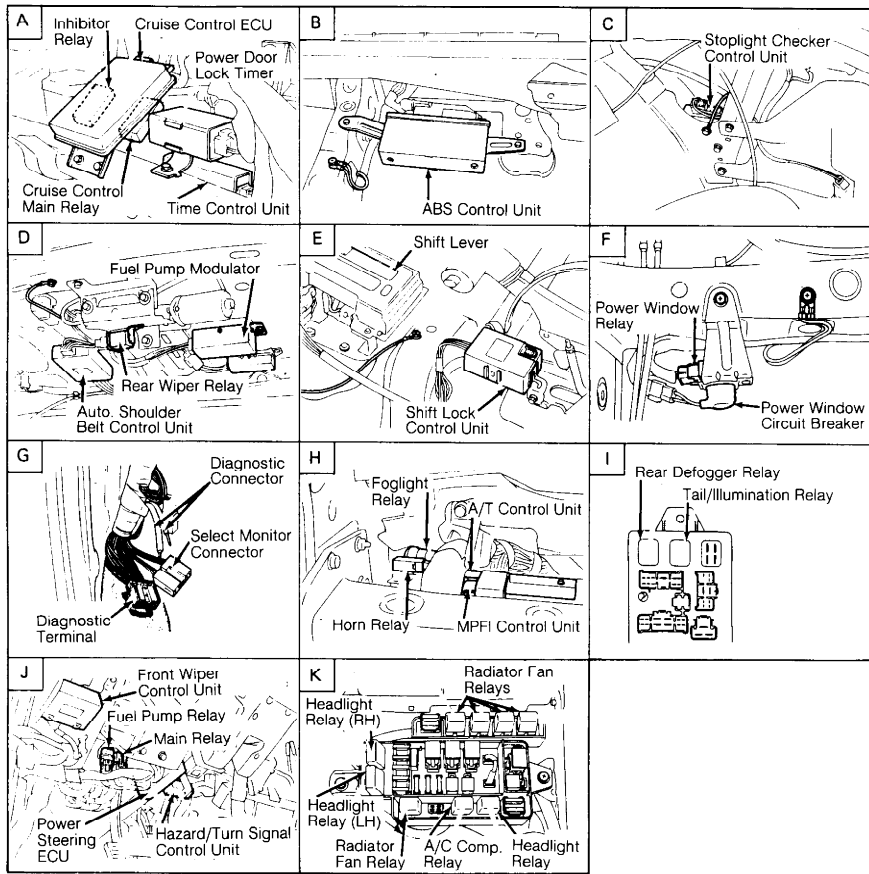
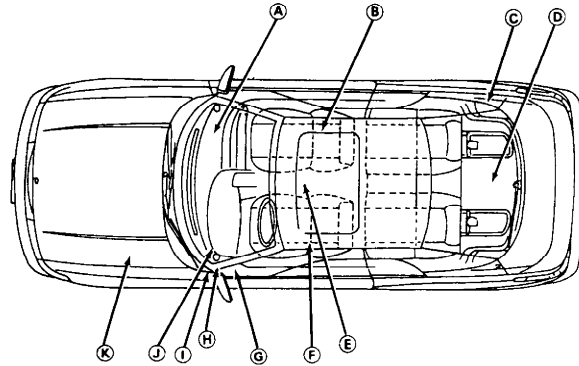


93C27435

Time Control Unit

Behind right side of dash.

Windshield Wiper

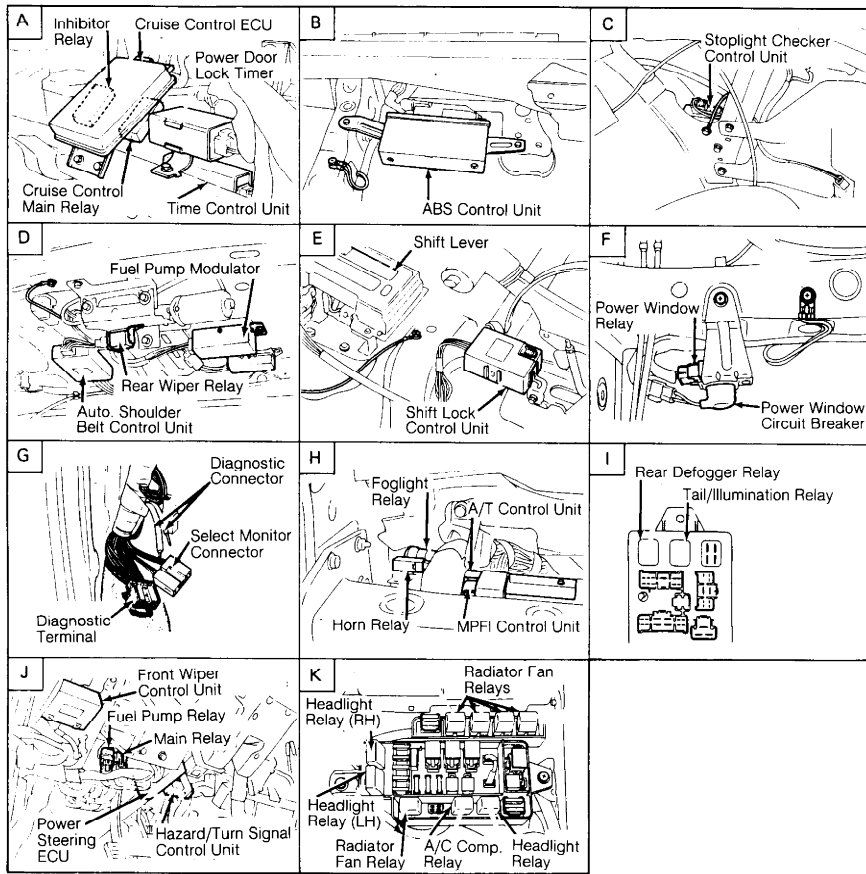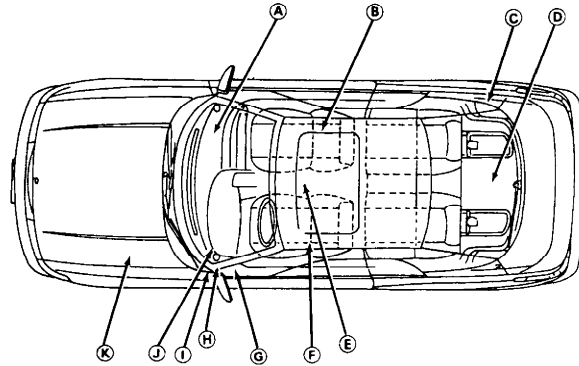

93C27435

Control Unit (Front)

Behind left side of dash.

MOTORS

Component

Component Location

A/C-Heater Blower Motor

Behind right side of dash.

Automatic Seat Belt Motors

In bottom of door posts.

Windshield Washer Pump

Bottom of washer fluid
reservoir.

SENDING UNITS & SENSORS

Component











Component Location

ABS Wheel Sensors

On bracket, on each wheel hub.

Air Bag Impact Sensors

On left and right front of
vehicle, behind bumper.

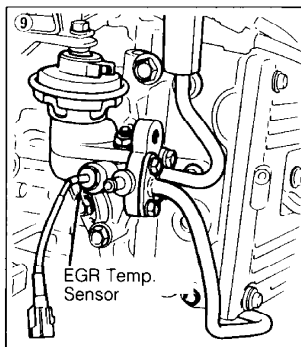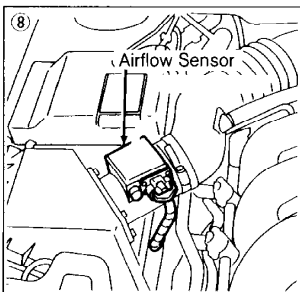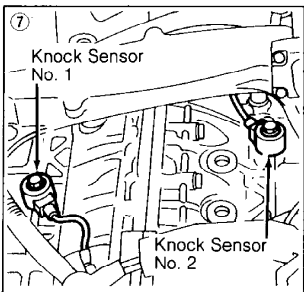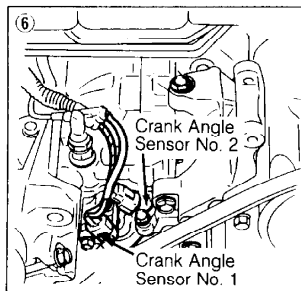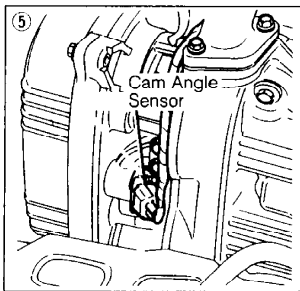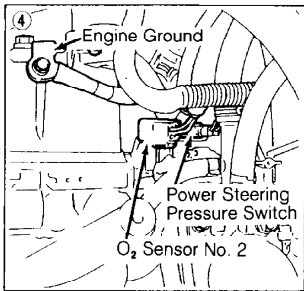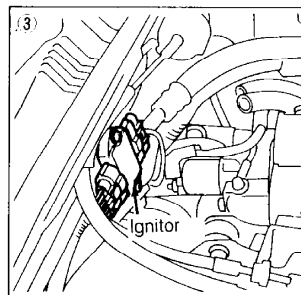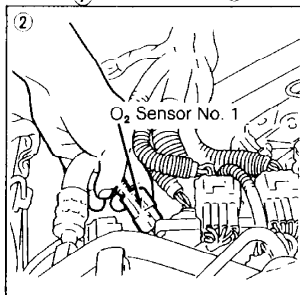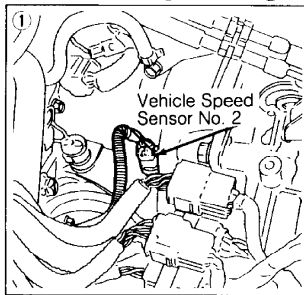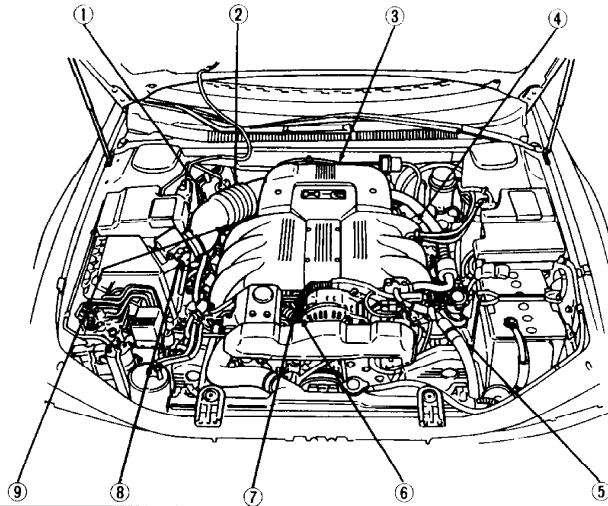

93B27434











Airflow Sensor

On air intake duct, near air filter.

A/T Fluid Temperature Sensor

Inside transmission pan, on valve body.

Auto. A/C-Heater System Ambient Temp. Sensor	Center of radiator grille.
Evaporator Sensor	In evaporator case.
In-Vehicle Temp. Sensor	Behind left side of A/C control panel.
Refrigerant Temp. Sensor	In evaporator.
Sunload Sensor	On top left of dash.
Water Temp. Sensor	In heater core.

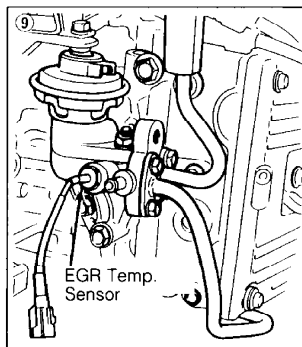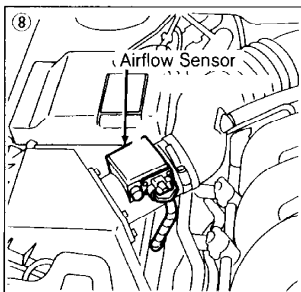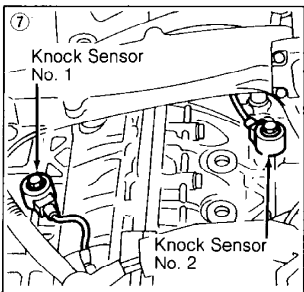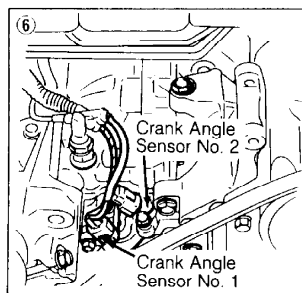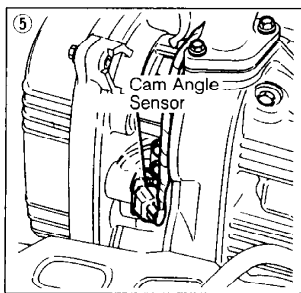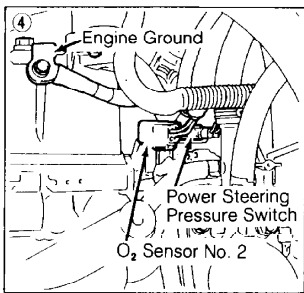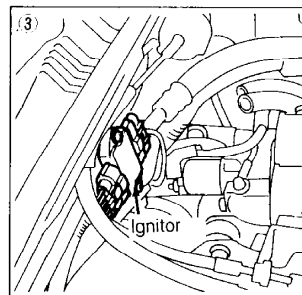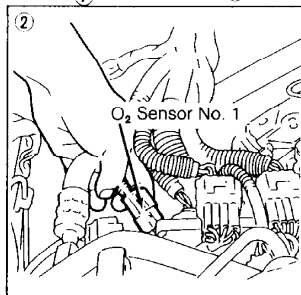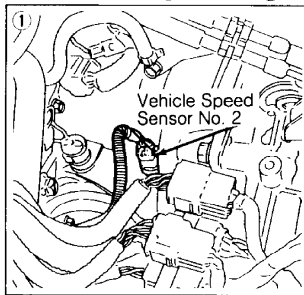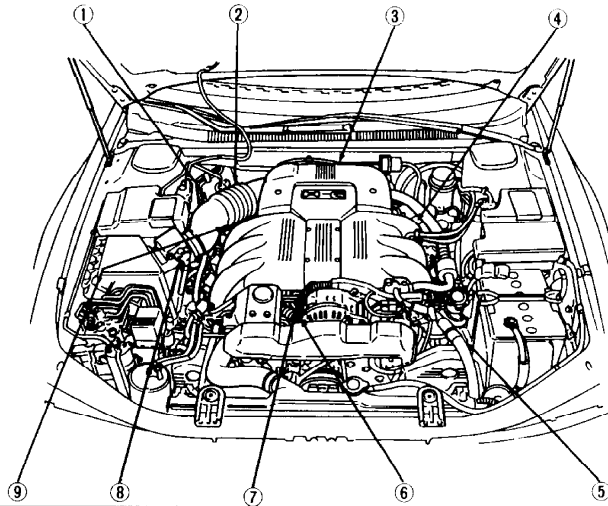

93B27434

Cam Angle Sensor

On left front of engine,
behind camshaft pulley.


Coolant Temp. Gauge Sending Unit

On left rear of water pipe,
below auxiliary air control

valve.

Coolant Temperature Sensor (CTS)











On left rear of water pipe,
below auxiliary air control
valve.

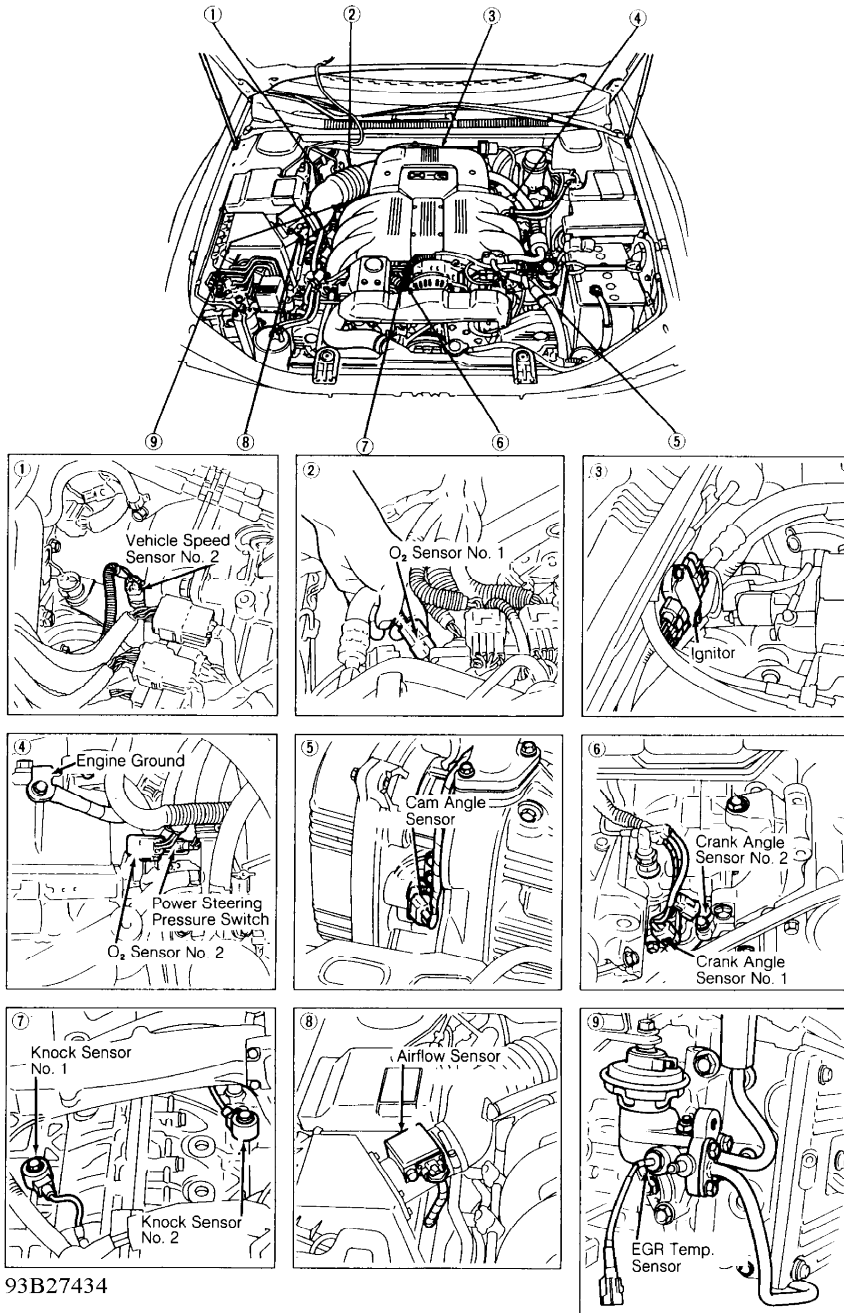

93B27434

Crank Angle Sensors (2)











On top front of engine, behind
crankshaft pulley.

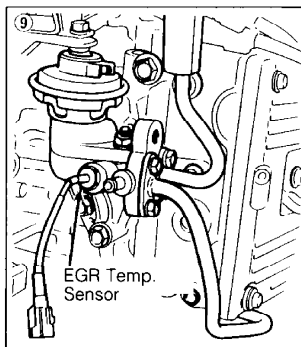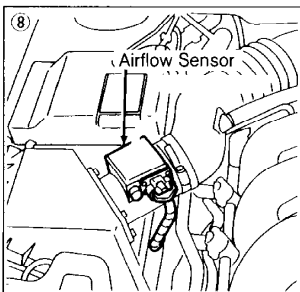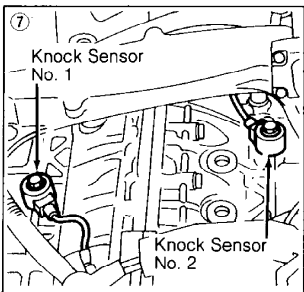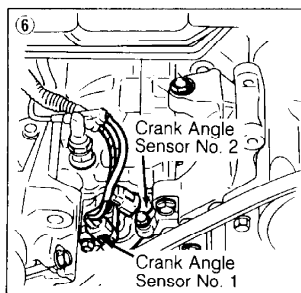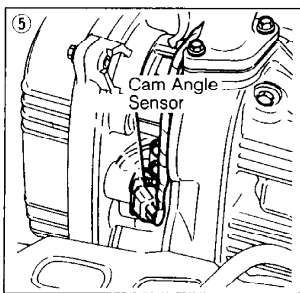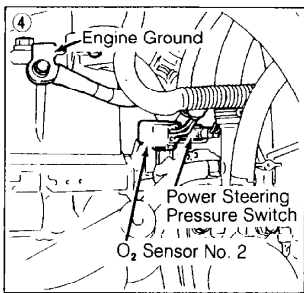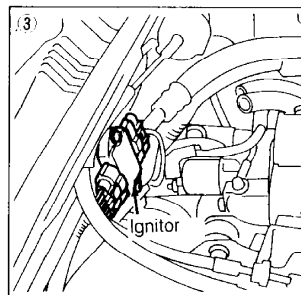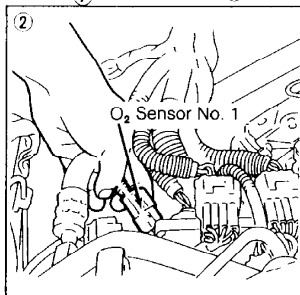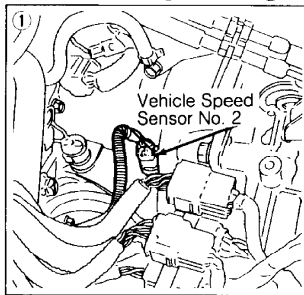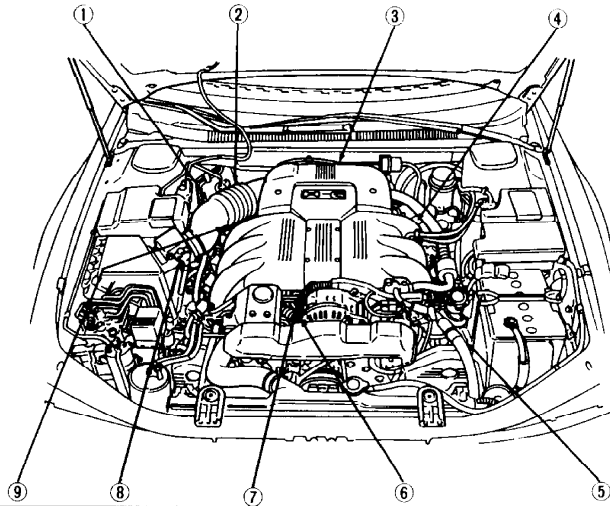

93B27434

EGR Temperature Sensor

On base of EGR valve.

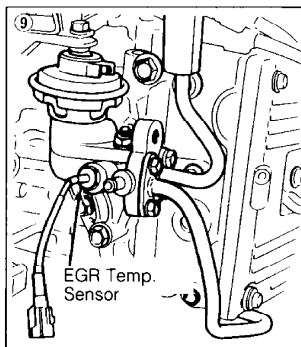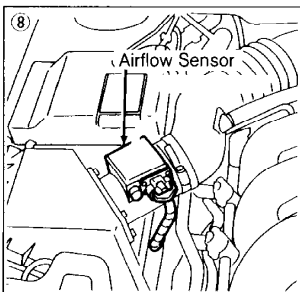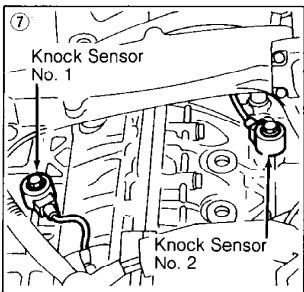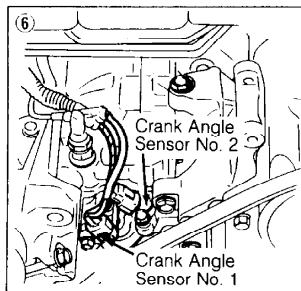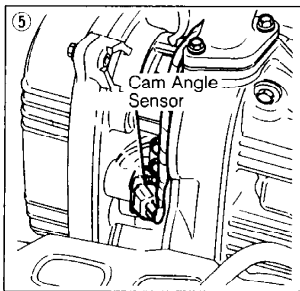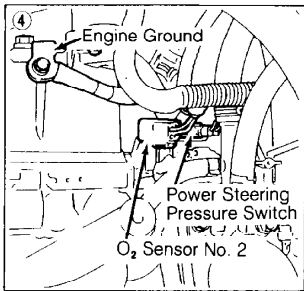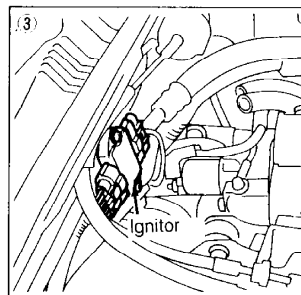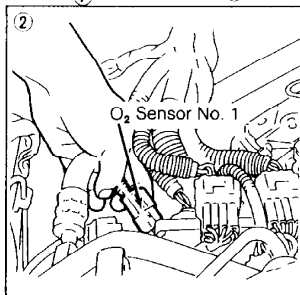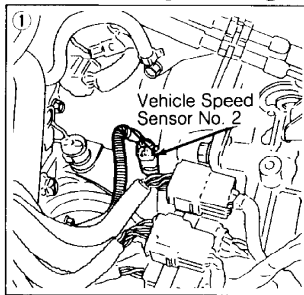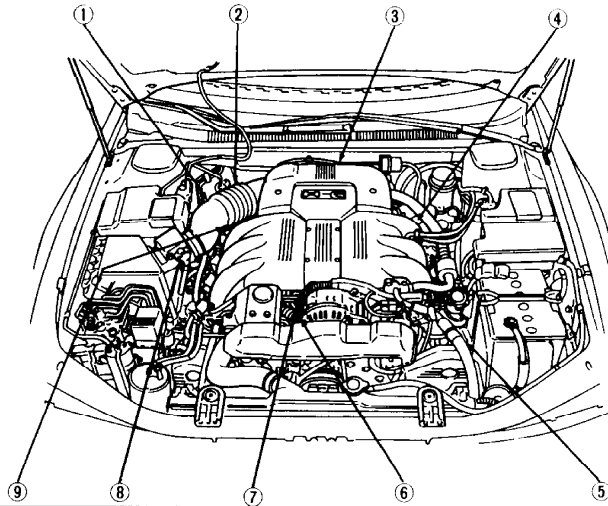

93B27434


Knock Sensors (2)

On top left and right side of engine.

Throttle Position Sensor (TPS)

On throttle body assembly.


Vehicle Speed Sensor

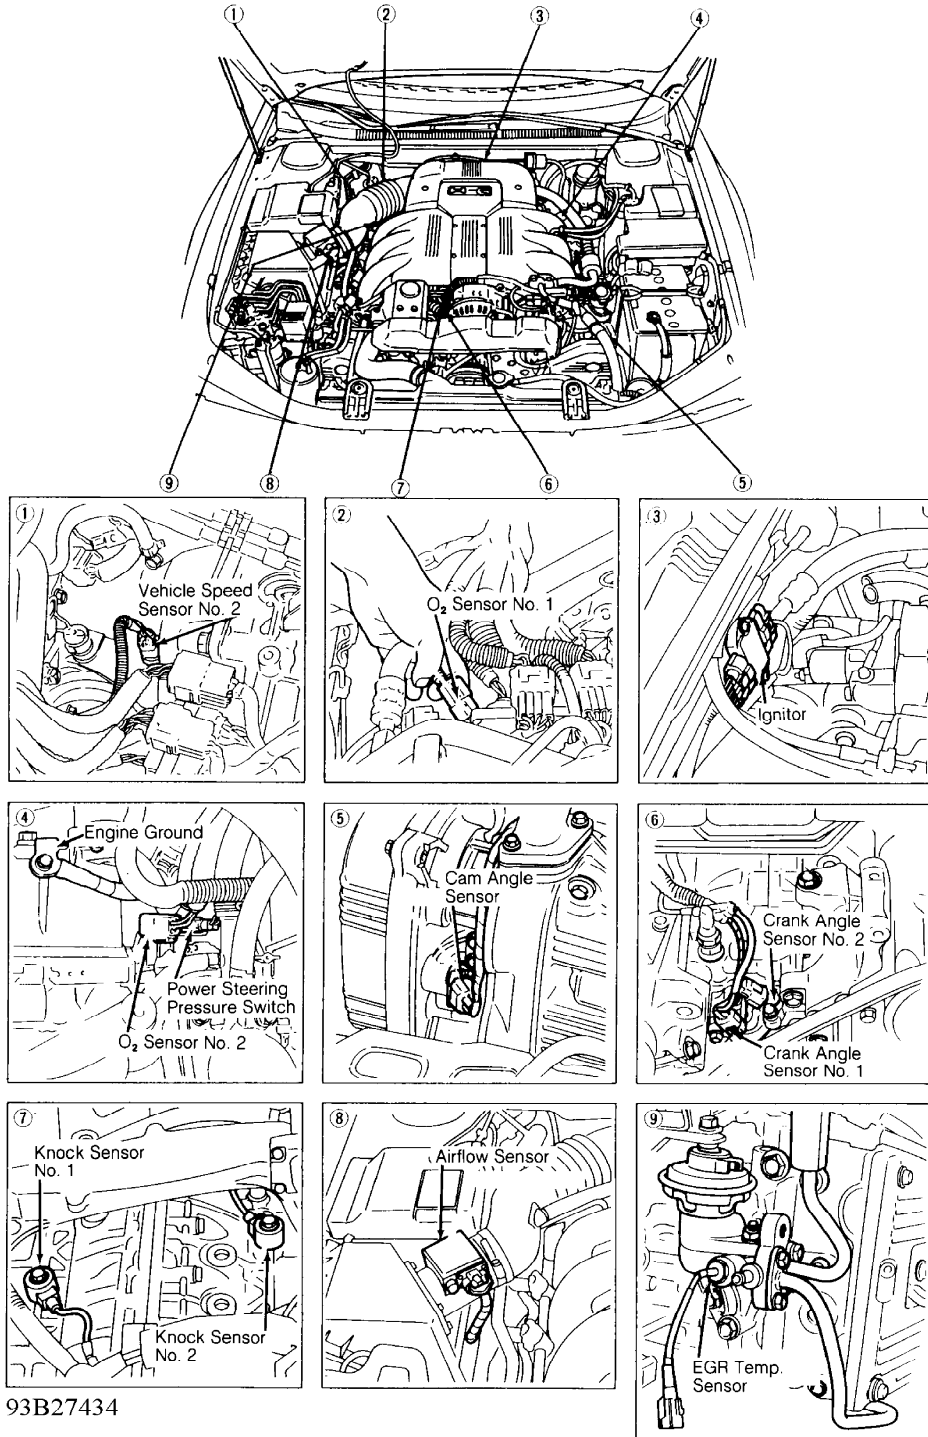

93B27434

SOLENOIDS & SOLENOID VALVES


Component	Component Location
Auxiliary Air Control Valve	Mounted on left rear of water pipe.
Brake Fluid Level Switch	In brake fluid reservoir.

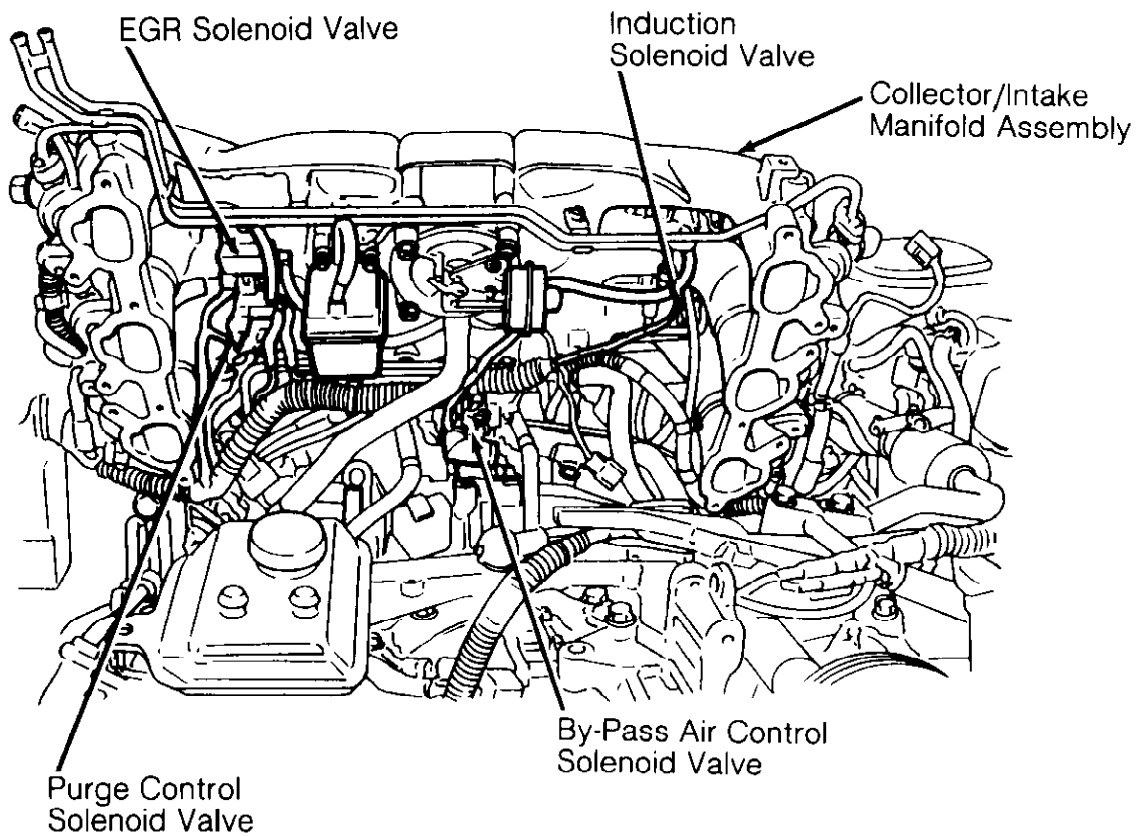

93A27433

By-Pass Air Solenoid Valve


Mounted under collector/intake manifold assembly.

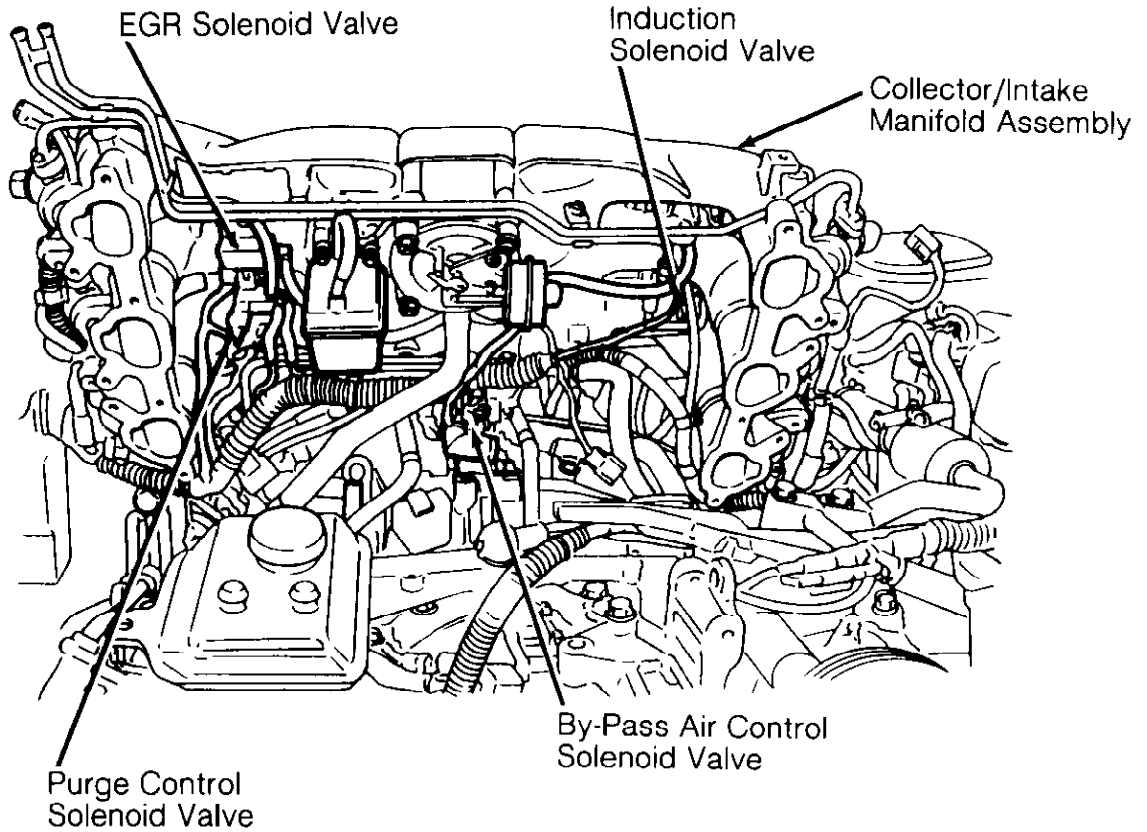

93A27433

EGR Solenoid Valve

Mounted under collector/intake manifold assembly.

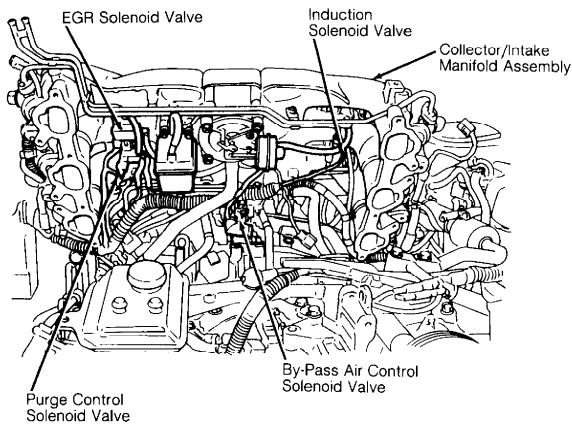


93A27433

Induction Control Sol. Valve

Mounted under collector/intake manifold assembly.

Power Steering Solenoid

Mounted on power steering rack assembly.

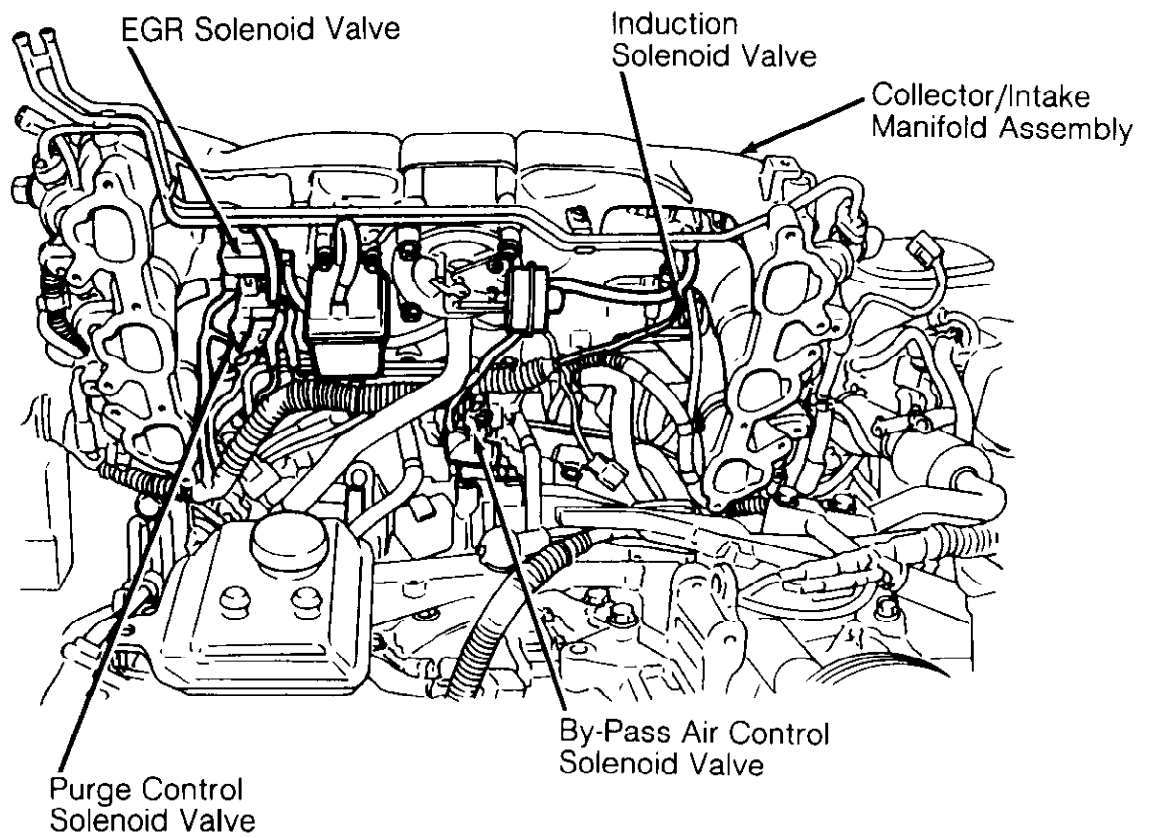

93A27433

Purge Control Solenoid Valve

Mounted under collector/intake manifold assembly.

SWITCHES

Component











Component Location

A/C Triple-Pressure Switch

On A/C high pressure line, near receiver-drier.

Inhibitor Switch (A/T)

On bottom right of transaxle.

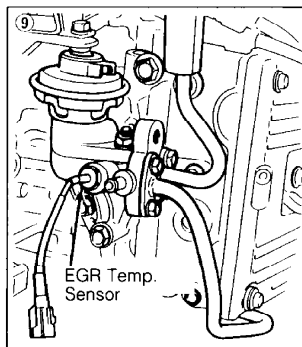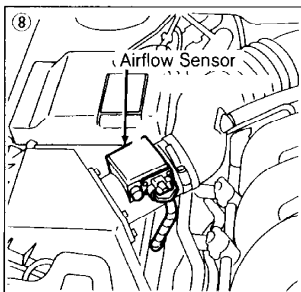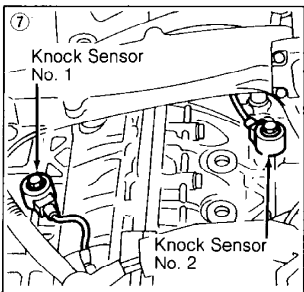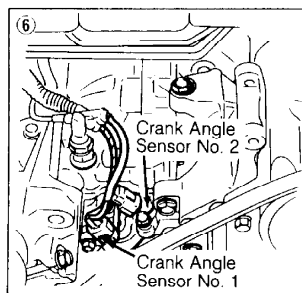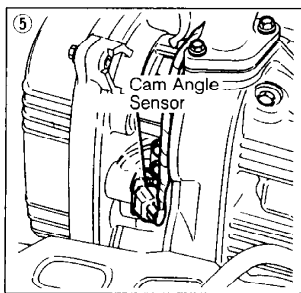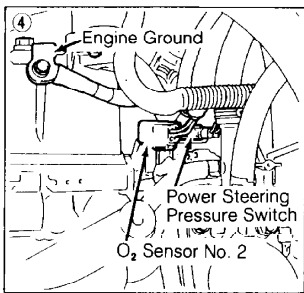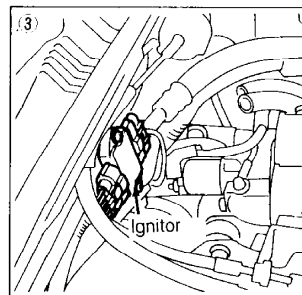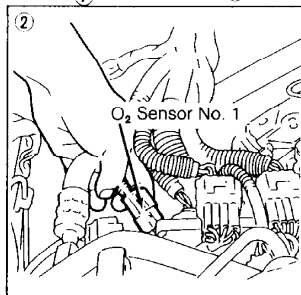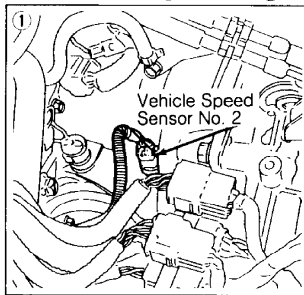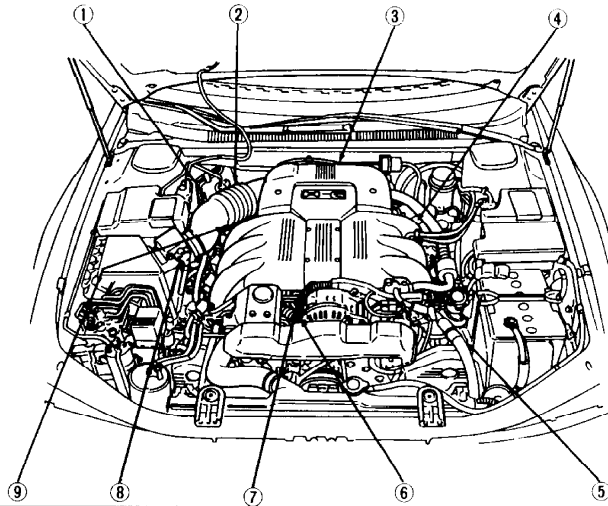

93B27434

Power Steering Pressure Switch

On power steering pump assembly.

Stoplight Switch

On bracket, above brake pedal.



MISCELLANEOUS

Component

Component Location

Blower Fan Amplifier



Mounted in evaporator case.

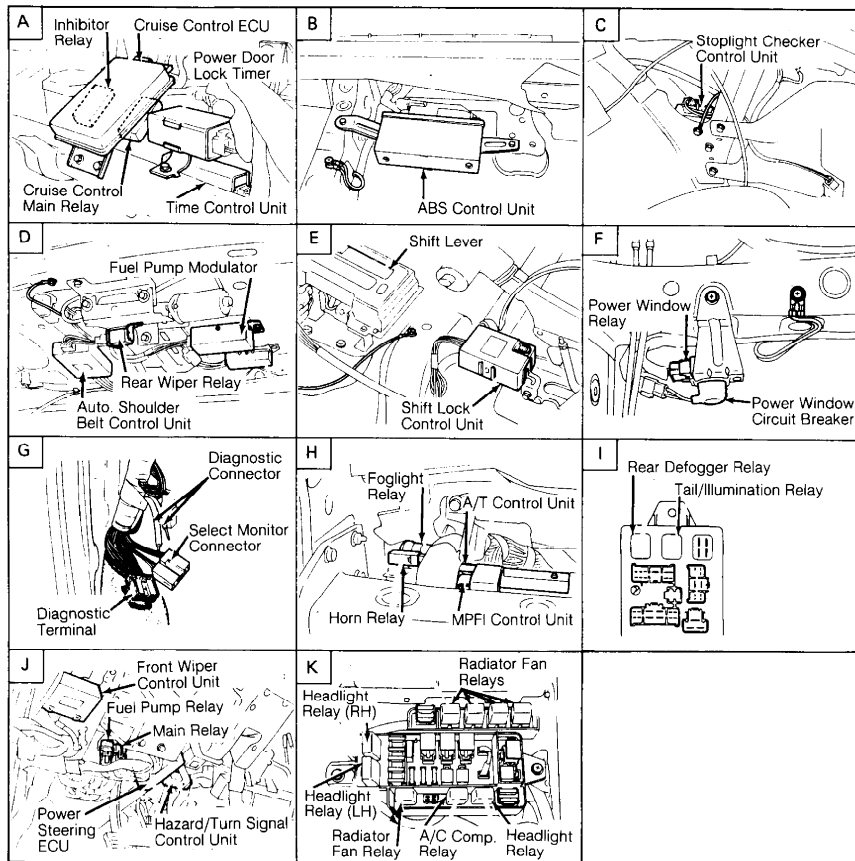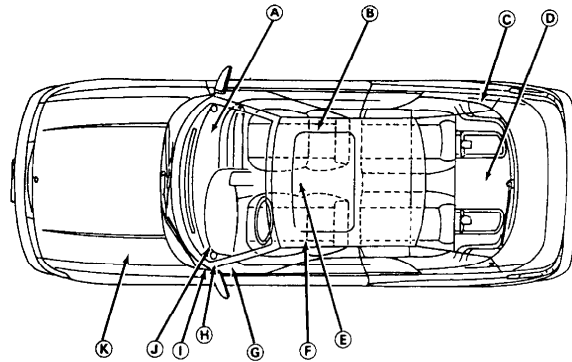

93C27435

Diagnostic Connector

Behind left side of dash.

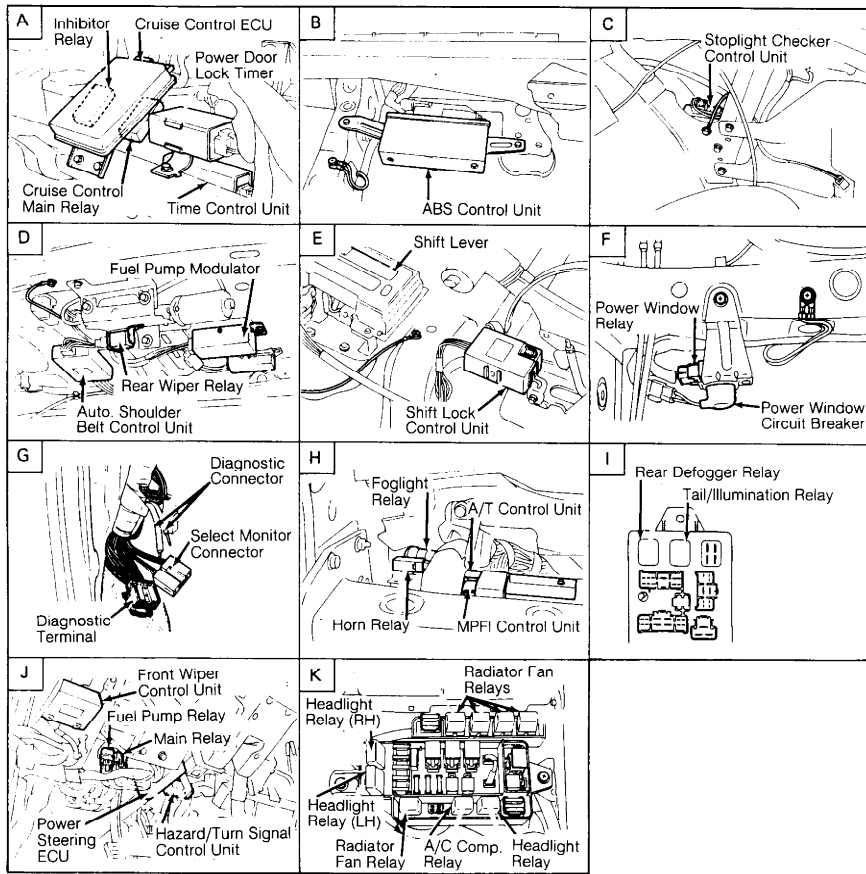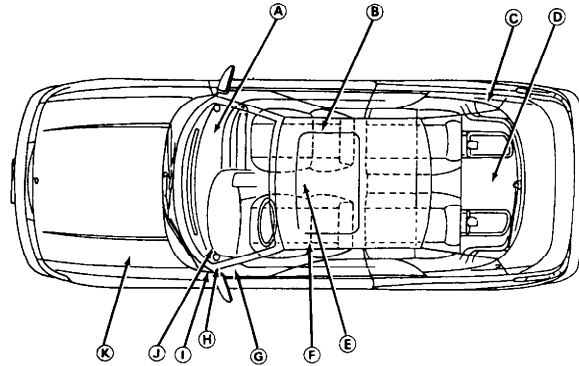



93C27435

Diagnostic Terminal

Behind left side of dash.

Fuel Pump Resistor

On rear of vehicle, near fuel pump modulator.

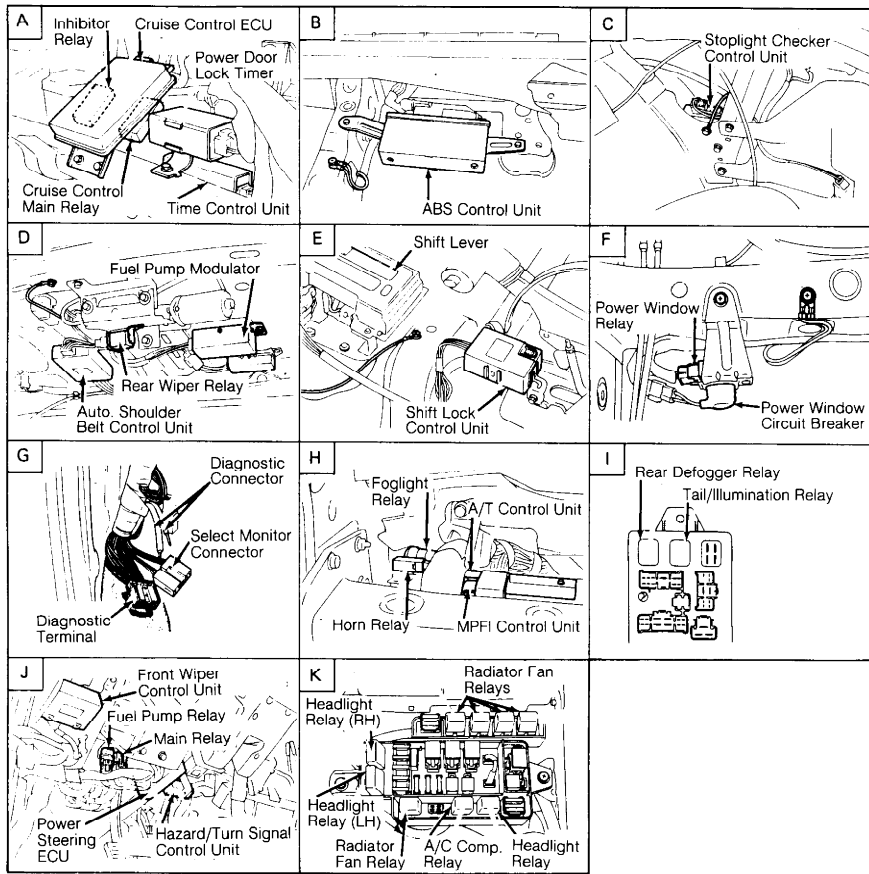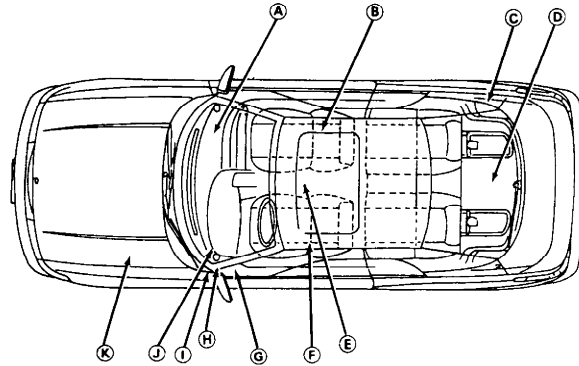

93C27435

Select Monitor Connector

Behind left side of dash.