



4) Tighten bolt which holds center exhaust pipe to hanger bracket.

Tightening torque:

35 ± 5 N·m (3.6 ± 0.5 kg-m, 26.0 ± 3.6 ft-lb)

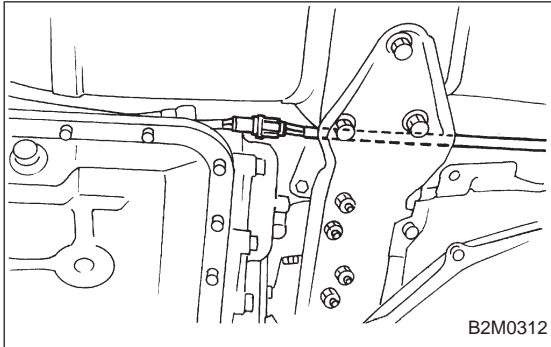

5) Connect rear oxygen sensor connector.

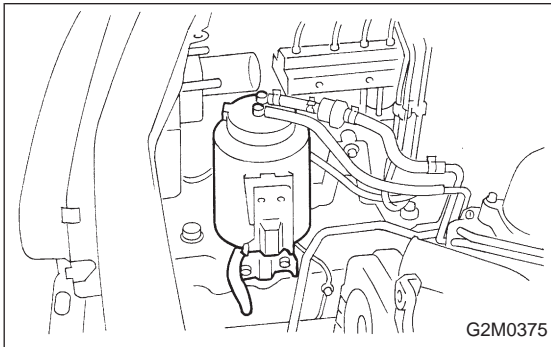

3. Canister


A: REMOVAL AND INSTALLATION

- 1) Disconnect canister hoses from evaporation pipes.
- 2) Remove canister with bracket.

3) Installation is in the reverse order of removal.

CAUTION:

Insert air vent hose of canister into the hole on body.

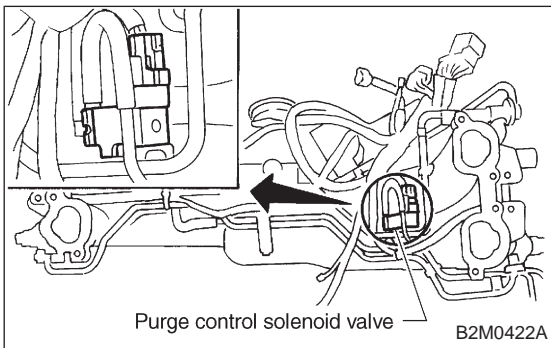

Purge control solenoid valve

B2M0422A


4. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION

- 1) Remove bolt which installs purge control solenoid valve onto intake manifold.

NOTE:

This figure shows the rear side of intake manifold.

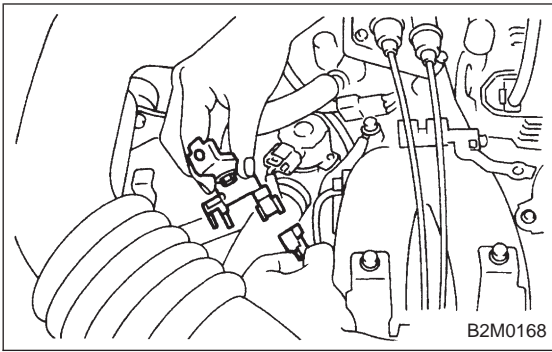


- 2) Take out purge control solenoid valve through the bottom of the intake manifold.
- 3) Disconnect connector and hoses from purge control solenoid valve.

4) Installation is in the reverse order of removal.

Tightening torque:

$16 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)

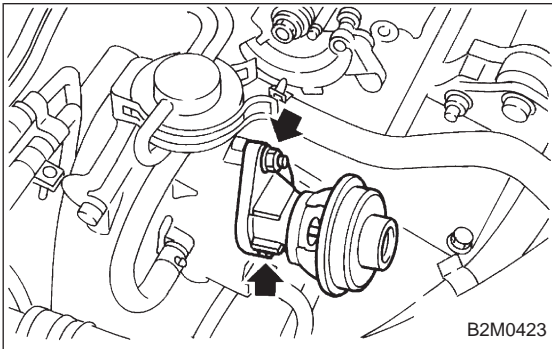

5. EGR Valve

A: REMOVAL AND INSTALLATION

- 1) Disconnect vacuum hose from EGR valve.
- 2) Remove bolts which install EGR valve onto intake manifold.


3) Installation is in the reverse order of removal.

CAUTION:

Replace gasket with a new one.

Tightening torque:

$17.1 - 20.1 \text{ N}\cdot\text{m}$ ($1.74 - 2.05 \text{ kg}\cdot\text{m}$, $12.6 - 14.8 \text{ ft}\cdot\text{lb}$)

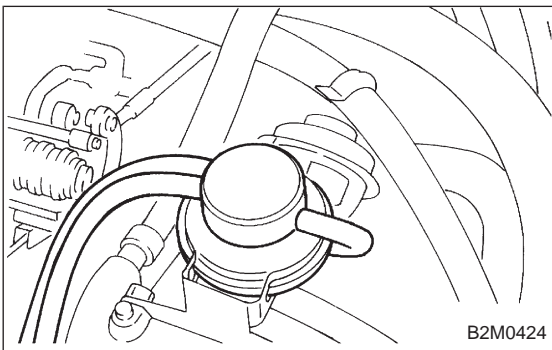

6. Back-Pressure Transducer (BPT)

A: REMOVAL AND INSTALLATION

- 1) Disconnect vacuum hoses from BPT.
- 2) Remove BPT from bracket.
- 3) Installation is in the reverse order of removal.