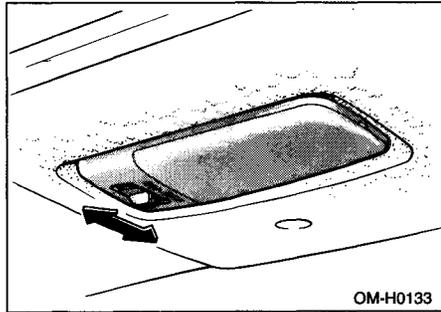

Interior light



The interior light switch has three positions:

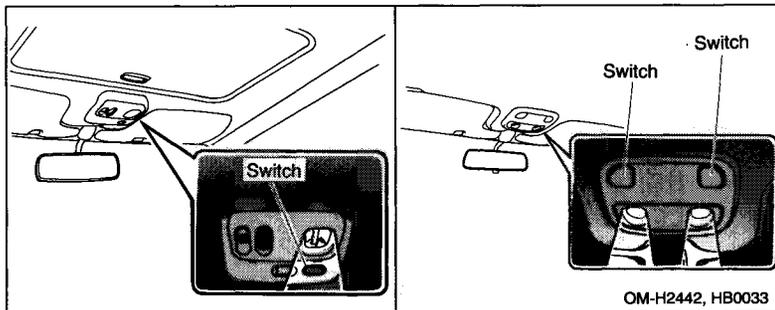
ON: The light stays on continuously.

Middle position: The light comes on only when any door is opened.

OFF: The light stays off.

When leaving your vehicle, make sure the light is turned off to avoid battery discharge.

Spotlight (if equipped)



To turn on the spotlight, push the switch. To turn it off, push the switch again.